

## CITROEN DPF Function List (Note:For reference only)

### NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	DPF
BERLINGO	BERLINGO (2) (M69)	●
BERLINGO	BERLINGO (B9)	●
C-CROSSER		●
C-ELYSEE	C-ELYSEE	●
C2	C2 (CAN) (2006 - )	●
C3	C3 (A51)	●
C3	C3 (AIRCROSS) (A88)	●
C3	C3 (B618)	●
C3	C3 (PICASSO) (A58)	●
C4	C4 (2004 - 2010)	●
C4	C4 (B7) (2010 - )	●
C4	C4 (CACTUS)	●
C4	C4 (L) (B7)	●
C4	C4 (PICASSO) (2006 - 2013)	●
C4	C4 (PICASSO) (B78) (2013 - )	●
C4	C4 (SEDAN) (2006 - )	●
C5	C5 (2001 - 2004)	●
C5	C5 (R) (2004 - 2007)	●
C5	C5 (X7) (2007 - )	●
C6	C6	●
C8	C8 (CAN) (2005 - )	●
C8	C8 (VAN) (2002 - 2005)	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	●
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 - )	●
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 - )	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	●
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 - )	●
SPACETOURER		●
XSARA	XSARA (2) (2000 - 2006)	●
XSARA	XSARA (PICASSO) (2002 - 2006)	●
XSARA	XSARA (PICASSO) (CHINA)	●

## CITRONE DPF Function List (Note:For reference only)

Filling Of The Diesel Additive Adding Reservoir
Forced Regeneration Of The Particle Emission Filter
Forced Regeneration Of The Particle Filter, Vehicle Stationary
Forced Regeneration Of The Particulate Filter While Driving
Forced Regeneration Vehicle Moving
Forced Regeneration Vehicle Stationary
Pariticle Filter Regeneration
Particulate Filter Replacement
Replacement Of The Diesel Additive Reservoir,Of The Pump Or Of The Pipes
Replacement Of The Differential Pressure Sensor
Replacement Of The Particle Emission Filter
Replacement Of The Particle Emission Filter Differential Pressure Sensor

CITROEN EPB Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	EPB
C-ELYSEE	C-ELYSEE	●
C3	C3 (AIRCROSS) (A88)	●
C3	C3 (B618)	●
C3	C3 (XR)	●
C4	C4 (2004 - 2010)	●
C4	C4 (B7) (2010 - )	●
C4	C4 (BZ3) (CHINA)	●
C4	C4 (L) (B7)	●
C4	C4 (PICASSO) (2006 - 2013)	●
C4	C4 (PICASSO) (B78) (2013 - )	●
C4	C4 (SEDAN) (2006 - )	●
C5	C5 (3rd Generation)	●
C5	C5 (AIRCROSS)	●
C5	C5 (X7) (2007 - )	●
C6	C6	●
C6	C6 (CHINA)	●
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 - )	●
SPACETOURER		●

CITRONE EPB Function List (Note:For reference only)

Cable Tensioning

Deactivation Of The Automatic Application Of The Electric Parking Brake Function

Electric Parking Brake Calibration

First Activation Of The Electric Parking Brake

Put In Fitting/Removal Position

Reactivation Of Automatic Application Of The Electric Parking Brake

Release Of The Motorised Brake Calipers

Replacement Of The Brake Pads

Replacement Of The Electric Parking Brake (FSE) Left-hand Actuator

Replacement Of The Electric Parking Brake (FSE) Right-hand Actuator

Replacement Of The Proportional Brake Switch

Replacement Of The Rear Left Motorised Brake Caliper

Replacement Of The Rear Right Motorised Brake Caliper

CITROEN ETC Function List (Note:For reference only)

NOTES:

● This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	ETC
BERLINGO	BERLINGO (1) (1996 - 2002)	●
BERLINGO	BERLINGO (2) (2002 - 2008)	●
BERLINGO	BERLINGO (B9)	●
C-ELYSEE	C-ELYSEE	●
C-ELYSEE	C-ELYSEE (R3)	●
C-QUATRE	C-QUATRE (4)	●
C-QUATRE	C-QUATRE (5)	●
C-TRIOMPHE		●
C2	C2 (CAN) (2006 - )	●
C2	C2 (CHINA)	●
C2	C2 (VAN) (2003 - 2006)	●
C3	C3 (2002 - 2006)	●
C3	C3 (A51)	●
C3	C3 (Ai51)	●
C3	C3 (AIRCROSS) (Ai58)	●
C3	C3 (PICASSO) (A58)	●
C3	C3 (PICASSO) (Ai58)	●
C3	C3 (PLURIEL) (2002 - 2009)	●
C3	C3 (R) (2006 - 2009)	●
C3	C3 (XR)	●
C4	C4 (2004 - 2010)	●
C4	C4 (B7) (2010 - )	●
C4	C4 (BZ3) (CHINA)	●
C4	C4 (L) (B7)	●
C4	C4 (PICASSO) (2006 - 2013)	●
C4	C4 (PICASSO) (B78) (2013 - )	●
C4	C4 (SEDAN) (2006 - )	●
C5	C5 (2001 - 2004)	●
C5	C5 (R) (2004 - 2007)	●
C5	C5 (X7) (2007 - )	●
C6	C6	●
C8	C8 (CAN) (2005 - )	●
C8	C8 (VAN) (2002 - 2005)	●
XSARA	XSARA (2) (2000 - 2006)	●
XSARA	XSARA (PICASSO) (1999 - 2002)	●
XSARA	XSARA (PICASSO) (2002 - 2006)	●
XSARA	XSARA (PICASSO) (CHINA)	●

CITRONE ETC Function List (Note:For reference only)

Initialisation Of The EGR Throttle

Initialising The Autoadaptives

Motorised Throttle Unit

Replacement Of Exhaust Gas Recycling Electric Throttle

Throttle Learning

CITROEN INJ Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	INJ
BERLINGO	BERLINGO (2) (M69)	●
BERLINGO	BERLINGO (B9)	●
C-ELYSEE	C-ELYSEE	●
C-QUATRE	C-QUATRE (4)	●
C-QUATRE	C-QUATRE (5)	●
C3	C3 (A51)	●
C3	C3 (Ai51)	●
C3	C3 (AIRCROSS) (A88)	●
C3	C3 (AIRCROSS) (Ai58)	●
C3	C3 (B618)	●
C3	C3 (PICASSO) (A58)	●
C3	C3 (PICASSO) (Ai58)	●
C3	C3 (XR)	●
C4	C4 (2004 - 2010)	●
C4	C4 (B7) (2010 - )	●
C4	C4 (BZ3) (CHINA)	●
C4	C4 (CACTUS)	●
C4	C4 (L) (B7)	●
C4	C4 (PICASSO) (2006 - 2013)	●
C4	C4 (PICASSO) (B78) (2013 - )	●
C4	C4 (SEDAN) (2006 - )	●
C5	C5 (3rd Generation)	●
C5	C5 (AIRCROSS)	●
C5	C5 (X7) (2007 - )	●
C6	C6	●
C6	C6 (CHINA)	●
C8	C8 (CAN) (2005 - )	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	●
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 - )	●
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 - )	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	●
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 - )	●
SPACETOURER		●

CITRONE INJ Function List (Note:For reference only)

Classification Of Injector

Configuration Of The Characterisation Of Diesel Injector

Diesel Injectors Programming Procedure

Initialisation Of Diesel Injector

Injector Replacement

Injectors

Reinitialisation Following Replacement Of The Urea Injector

Replacement Of Injector

Replacement Of One Or More Petrol Injectors

Replacement Of One Or Several Injectors

Replacement Of The Cyliner Head Or Programming Of The Injectors

CITROEN OIL Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	OIL
BERLINGO	BERLINGO (2) (2002 - 2008)	●
BERLINGO	BERLINGO (2) (M69)	●
BERLINGO	BERLINGO (B9)	●
BERLINGO	BERLINGO Electric (B9E)	●
C-CROSSER		●
C-ELYSEE	C-ELYSEE	●
C3	C3 (A51)	●
C3	C3 (Ai51)	●
C3	C3 (AIRCROSS) (A88)	●
C3	C3 (AIRCROSS) (Ai58)	●
C3	C3 (B618)	●
C3	C3 (PICASSO) (A58)	●
C3	C3 (PICASSO) (Ai58)	●
C3	C3 (XR)	●
C4	C4 (2004 - 2010)	●
C4	C4 (AIRCROSS)	●
C4	C4 (B7) (2010 - )	●
C4	C4 (BZ3) (CHINA)	●
C4	C4 (CACTUS)	●
C4	C4 (L) (B7)	●
C4	C4 (PICASSO) (2006 - 2013)	●
C4	C4 (PICASSO) (B78) (2013 - )	●
C4	C4 (SEDAN) (2006 - )	●
C5	C5 (3rd Generation)	●
C5	C5 (AIRCROSS)	●
C5	C5 (X7) (2007 - )	●
C6	C6	●
C6	C6 (CHINA)	●
C8	C8 (CAN) (2005 - )	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	●
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 - )	●
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 - )	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	●
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 - )	●
NEMO		●
SPACETOURER		●

CITROEN OIL Function List (Note:For reference only)

Choice Of Maintenance Schedule

Configuration Of A New Maintenance Plan

Maintenance Indicator

Maintenance Indicator Reset

Maintenance Limit

Maintenance Mileage Zero Reset + Maintenance Number

Maintenance Number Zero Reset

Maintenance Number Zero Reset Carried Out

Oil Parameter Reinitialisation

Replacement Of The Engine Oil

Reset Service

Zeroing Of The Service Indicator

CITROEN SAS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	SAS
BERLINGO	BERLINGO (2) (2002 - 2008)	●
BERLINGO	BERLINGO (B9)	●
BERLINGO	BERLINGO Electric (B9E)	●
C-CROSSER		●
C-ELYSEE	C-ELYSEE	●
C-TRIOMPHE		●
C-ZERO		●
C1	C1 (B4)	●
C2	C2 (CAN) (2006 - )	●
C3	C3 (A51)	●
C3	C3 (Ai51)	●
C3	C3 (AIRCROSS) (A88)	●
C3	C3 (AIRCROSS) (Ai58)	●
C3	C3 (B618)	●
C3	C3 (PICASSO) (A58)	●
C3	C3 (PICASSO) (Ai58)	●
C3	C3 (PLURIEL) (2002 - 2009)	●
C3	C3 (R) (2006 - 2009)	●
C3	C3 (XR)	●
C4	C4 (2004 - 2010)	●
C4	C4 (AIRCROSS)	●
C4	C4 (B7) (2010 - )	●
C4	C4 (BZ3) (CHINA)	●
C4	C4 (L) (B7)	●
C4	C4 (PICASSO) (2006 - 2013)	●
C4	C4 (PICASSO) (B78) (2013 - )	●
C4	C4 (SEDAN) (2006 - )	●
C5	C5 (3rd Generation)	●
C5	C5 (AIRCROSS)	●
C5	C5 (X7) (2007 - )	●
C6	C6	●
C6	C6 (CHINA)	●
C8	C8 (CAN) (2005 - )	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	●
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 - )	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	●
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 - )	●
NEMO		●
SPACETOURER		●
XSARA	XSARA (PICASSO) (1999 - 2002)	●
XSARA	XSARA (PICASSO) (2002 - 2006)	●
XSARA	XSARA (PICASSO) (CHINA)	●

CITROEN SAS Function List (Note:For reference only)

Calibration Of The Steering Wheel Angle Sensor

Calibration Of The Yaw Speed Sensor

Calibration/Decalibration Of The Steering Wheel Angle Sensor

Longitudinal Acceleration Sensor Calibration

Steering Wheel Angle Sensor Programming

CITROEN BLD Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	BLD
BERLINGO	BERLINGO (2) (2002 - 2008)	●
BERLINGO	BERLINGO (2) (M69)	●
BERLINGO	BERLINGO (B9)	●
BERLINGO	BERLINGO Electric (B9E)	●
C-ELYSEE	C-ELYSEE	●
C-QUATRE	C-QUATRE (4)	●
C-QUATRE	C-QUATRE (5)	●
C-TRIOMPHE		●
C3	C3 (A51)	●
C3	C3 (Ai51)	●
C3	C3 (AIRCROSS) (A88)	●
C3	C3 (AIRCROSS) (Ai58)	●
C3	C3 (B618)	●
C3	C3 (PICASSO) (A58)	●
C3	C3 (PICASSO) (Ai58)	●
C3	C3 (XR)	●
C4	C4 (2004 - 2010)	●
C4	C4 (B7) (2010 - )	●
C4	C4 (BZ3) (CHINA)	●
C4	C4 (L) (B7)	●
C4	C4 (PICASSO) (2006 - 2013)	●
C4	C4 (PICASSO) (B78) (2013 - )	●
C4	C4 (SEDAN) (2006 - )	●
C5	C5 (3rd Generation)	●
C5	C5 (AIRCROSS)	●
C5	C5 (X7) (2007 - )	●
C6	C6	●
C6	C6 (CHINA)	●
C8	C8 (CAN) (2005 - )	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	●
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 - )	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	●
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 - )	●
SPACETOURER		●

CITRONE BLD Function List (Note:For reference only)

Bleeding

Bleeding Of The Hydraulic Block

Bleeding Of The Hydraulic Block ABS MK100

Bleeding Of The Hydraulic Block ASR8.0

Bleeding Of The Hydraulic Block ESP MK100

Bleeding Of The Hydraulic Circuit

CITROEN BMS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	BMS
BERLINGO	BERLINGO (B9)	●
BERLINGO	BERLINGO Electric (B9E)	●
C3	C3 (A51)	●
C3	C3 (AIRCROSS) (A88)	●
C3	C3 (B618)	●
C3	C3 (PICASSO) (A58)	●
C4	C4 (2004 - 2010)	●
C4	C4 (B7) (2010 - )	●
C4	C4 (PICASSO) (2006 - 2013)	●
C4	C4 (PICASSO) (B78) (2013 - )	●
C4	C4 (SEDAN) (2006 - )	●
C5	C5 (3rd Generation)	●
C5	C5 (AIRCROSS)	●
C5	C5 (X7) (2007 - )	●
C6	C6	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	●
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 - )	●
SPACETOURER		●

CITRONE BMS Function List (Note:For reference only)

Manual Configuration



## CITROEN Diagnostic Function List (Note:For reference only)

### NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Type	System Name	EcuInfo	Read Codes	Erase Codes	LiveData	Act
BERLINGO	BERLINGO (1) (1996 - 2002)	ABS (ABS Electronic Distribution)	●	●	●	●	●
BERLINGO	BERLINGO (1) (1996 - 2002)	CD (CD Player)	●	●	●	●	●
BERLINGO	BERLINGO (1) (1996 - 2002)	ECM (Engine Control Module)	●	●	●	●	●
BERLINGO	BERLINGO (1) (1996 - 2002)	IP (Instrument Cluster Panel)	●	●	●	●	●
BERLINGO	BERLINGO (1) (1996 - 2002)	RADIO1 (Radio Post-equipment(Autoradio 1))	●	●	●	●	●
BERLINGO	BERLINGO (1) (1996 - 2002)	SRS (Autoliv/(SAC AKF) Airbag)	●	●	●	●	●
BERLINGO	BERLINGO (2) (2002 - 2008)	ABS (Anti-lock brake System)	●	●	●	●	●
BERLINGO	BERLINGO (2) (2002 - 2008)	AH (Additional Heating(Chauff-add))	●	●	●	●	●
BERLINGO	BERLINGO (2) (2002 - 2008)	Alarm(Alarme_texton)	●	●	●	●	●
BERLINGO	BERLINGO (2) (2002 - 2008)	BSI (Built-in Systems Interface)	●	●	●	●	●
BERLINGO	BERLINGO (2) (2002 - 2008)	CD (CD Player(Changer-cd))	●	●	●	●	●
BERLINGO	BERLINGO (2) (2002 - 2008)	ECM (Engine Control Module)	●	●	●	●	●
BERLINGO	BERLINGO (2) (2002 - 2008)	IP (Instrument Cluster Panel)	●	●	●	●	●
BERLINGO	BERLINGO (2) (2002 - 2008)	MULD (Multifunction Display SAGEM A)	●	●	●	●	●
BERLINGO	BERLINGO (2) (2002 - 2008)	PAM (Parking Assistance)	●	●	●	●	●
BERLINGO	BERLINGO (2) (2002 - 2008)	RADIO2 (Radio Post-equipment(Autoradio 2))	●	●	●	●	●
BERLINGO	BERLINGO (2) (2002 - 2008)	RBS (Rain And Brightness Sensor(Pluie_luminosite))	●	●	●	●	●
BERLINGO	BERLINGO (2) (2002 - 2008)	SM (Services Module)	●	●	●	●	●
BERLINGO	BERLINGO (2) (2002 - 2008)	SRS (Airbag 5.3)	●	●	●	●	●
BERLINGO	BERLINGO (2) (2002 - 2008)	SRS (Airbag)	●	●	●	●	●
BERLINGO	BERLINGO (2) (2002 - 2008)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
BERLINGO	BERLINGO (2) (M69)	ABS (Anti-lock brake System)	●	●	●	●	●
BERLINGO	BERLINGO (2) (M69)	BSI (Built-in Systems Interface)	●	●	●	●	●
BERLINGO	BERLINGO (2) (M69)	ECM (Engine Control Module)	●	●	●	●	●
BERLINGO	BERLINGO (2) (M69)	IP (Instrument Cluster Panel)	●	●	●	●	●
BERLINGO	BERLINGO (2) (M69)	SRS (Airbag)	●	●	●	●	●
BERLINGO	BERLINGO (2) (M69)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
BERLINGO	BERLINGO (B9)	ABS (Anti-lock brake System)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	AC (AIR Conditioning Compressor)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	ASM (Anti-slip Mode Selector)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	Alarm	●	●	●	●	●
BERLINGO	BERLINGO (B9)	BATT (Battery Change Status Unit)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	BATT (Onboard Charger Of The Traction Battery)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	BATT (Traction Battery ECU)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	BATT-01 (Traction Battery Cells Management(Module 01))	●	●	●	●	●
BERLINGO	BERLINGO (B9)	BATT-02 (Traction Battery Cells Management(Module 02))	●	●	●	●	●
BERLINGO	BERLINGO (B9)	BATT-03 (Traction Battery Cells Management(Module 03))	●	●	●	●	●
BERLINGO	BERLINGO (B9)	BATT-04 (Traction Battery Cells Management(Module 04))	●	●	●	●	●
BERLINGO	BERLINGO (B9)	BATT-05 (Traction Battery Cells Management(Module 05))	●	●	●	●	●
BERLINGO	BERLINGO (B9)	BATT-07 (Traction Battery Cells Management(Module 07))	●	●	●	●	●
BERLINGO	BERLINGO (B9)	BATT-08 (Traction Battery Cells Management(Module 08))	●	●	●	●	●
BERLINGO	BERLINGO (B9)	BATT-09 (Traction Battery Cells Management(Module 09))	●	●	●	●	●
BERLINGO	BERLINGO (B9)	BATT-10 (Traction Battery Cells Management(Module 10))	●	●	●	●	●
BERLINGO	BERLINGO (B9)	BSI (Built-in Systems Interface)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	BWCU (Bodywork Conversion Unit)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	CD (CD Player)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	ECM (Engine Control Module)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	EMM (Electric Machine Management ECU)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	EPS (Electric Power Steering Electric Pump Unit)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	ERU (Engine Relay Unit)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	EVM (Electric Vehicle Management ECU)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	HFC (Hands Free Control Kit)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	HFR (High Frequency Receiver)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	IP (Instrument Cluster Panel)	●	●	●	●	●

BERLINGO	BERLINGO (B9)	MDAP (Multiplexed Diesel Additive Pump)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	MULS (Multifunction Screen)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	PAM (Parking Assistance)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	PCAHR (Passenger's Compartment Air Heating Resistor)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	RS (Rain Sensor)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	Radio	●	●	●	●	●
BERLINGO	BERLINGO (B9)	SM (Services Module)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	SRS (Airbag)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
BERLINGO	BERLINGO (B9)	TCM (Automatic Gearbox)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	TEU (Telematics Unit)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	TRU (Trailer Relay Unit)	●	●	●	●	●
BERLINGO	BERLINGO (B9)	UID (Under Inflation Detection(Dsg))	●	●	●	●	●
BERLINGO	BERLINGO (B9)	VRD (Voltage Retaining Device)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	ABS (Anti-lock brake System)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	AC (AIR Conditioning Compressor)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	ASM (Anti-slip Mode Selector)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	Alarm	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	BATT (Battery Change Status Unit)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	BATT (Onboard Charger Of The Traction Battery)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	BATT (Traction Battery ECU)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	BATT-01 (Traction Battery Cells Management(Module 01))	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	BATT-02 (Traction Battery Cells Management(Module 02))	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	BATT-03 (Traction Battery Cells Management(Module 03))	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	BATT-04 (Traction Battery Cells Management(Module 04))	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	BATT-05 (Traction Battery Cells Management(Module 05))	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	BATT-07 (Traction Battery Cells Management(Module 07))	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	BATT-08 (Traction Battery Cells Management(Module 08))	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	BATT-09 (Traction Battery Cells Management(Module 09))	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	BATT-10 (Traction Battery Cells Management(Module 10))	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	BSI (Built-in Systems Interface)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	BWCU (Bodywork Conversion Unit)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	CD (CD Player)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	ECM (Engine Control Module)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	EMM (Electric Machine Management ECU)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	EPS (Electric Power Steering Electric Pump Unit)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	ERU (Engine Relay Unit)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	EVM (Electric Vehicle Management ECU)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	HFC (Hands Free Control Kit)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	HFR (High Frequency Receiver)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	IP (Instrument Cluster Panel)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	MDAP (Multiplexed Diesel Additive Pump)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	MULS (Multifunction Screen)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	PAM (Parking Assistance)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	PCAHR (Passenger's Compartment Air Heating Resistor)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	RS (Rain Sensor)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	Radio	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	SM (Services Module)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	SRS (Airbag)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	TCM (Automatic Gearbox)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	TEU (Telematics Unit)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	TRU (Trailer Relay Unit)	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	UID (Under Inflation Detection(Dsg))	●	●	●	●	●
BERLINGO	BERLINGO Electric (B9E)	VRD (Voltage Retaining Device)	●	●	●	●	●
C-CROSSER		ABS (Anti-lock brake System)	●	●	●	●	●
C-CROSSER		AC (Air Conditioning)	●	●	●	●	●
C-CROSSER		AFS	●	●	●	●	●
C-CROSSER		BSI (Built-in Systems Interface)	●	●	●	●	●
C-CROSSER		DPICRF (Rear Final Drive Piloted Clutch)	●	●	●	●	●
C-CROSSER		DSPRLH (Rear LH Door Switch Panel)	●	●	●	●	●
C-CROSSER		DSPRRH (Rear RH Door Switch Panel)	●	●	●	●	●

C-CROSSER		ECM (Engine Control Module)	●	●	●	●	●
C-CROSSER		HFC (Hands Free Control Kit)	●	●	●	●	●
C-CROSSER		IMMO (Locking And Immobiliser Control Module)	●	●	●	●	●
C-CROSSER		IP (Instrument Cluster Panel)	●	●	●	●	●
C-CROSSER		KEY (Electronic Key Reader)	●	●	●	●	●
C-CROSSER		NAVI (Navigation)	●	●	●	●	●
C-CROSSER		PAM (Parking Assistance)	●	●	●	●	●
C-CROSSER		PDPC	●	●	●	●	●
C-CROSSER		PDPP	●	●	●	●	●
C-CROSSER		RBS (Rain And Brightness Sensor)	●	●	●	●	●
C-CROSSER		Radio	●	●	●	●	●
C-CROSSER		SAS (Steering Wheel Angle Sensor)	●	●	●	●	●
C-CROSSER		SRS (Airbag)	●	●	●	●	●
C-CROSSER		Sunroof	●	●	●	●	●
C-CROSSER		TCM (Automatic Gearbox)	●	●	●	●	●
C-CROSSER		TCM (Gear Lever(Dct))	●	●	●	●	●
C-ELYSEE	C-ELYSEE	ABS (Anti-lock brake System BOSCH 8.1)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	ABS (Anti-lock brake System)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	BSI (Built-in Systems Interface)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	CLC (Central Locking Control Unit)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	ECM (Engine Control Module)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	EPS (Electric Power Steering)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	ESL (Electric Steering Lock)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	IP (Instrument Cluster Panel)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	KEY (Electronic Key Reader)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	MAP (Multiplexed Addition Pump)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	MULS (Multifunction Screen)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	PAM (Parking Assistance)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	Radio	●	●	●	●	●
C-ELYSEE	C-ELYSEE	SM (Services Module)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	SRS (Airbag)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	SRS (Autoliv Central Airbag)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C-ELYSEE	C-ELYSEE	Siren	●	●	●	●	●
C-ELYSEE	C-ELYSEE	TCM (Automatic Gearbox AL4 TA2000)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	TCM (Automatic Gearbox)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	TRU (Trailer Relay Unit)	●	●	●	●	●
C-ELYSEE	C-ELYSEE	VRD (Voltage Retaining Device)	●	●	●	●	●
C-ELYSEE	C-ELYSEE (R3)	ABS (Anti-lock brake System BOSCH 8.1)	●	●	●	●	●
C-ELYSEE	C-ELYSEE (R3)	CLC (Central Locking Control Unit)	●	●	●	●	●
C-ELYSEE	C-ELYSEE (R3)	ECM (Engine Control Module)	●	●	●	●	●
C-ELYSEE	C-ELYSEE (R3)	KEY (Electronic Key Reader)	●	●	●	●	●
C-ELYSEE	C-ELYSEE (R3)	SRS (Airbag)	●	●	●	●	●
C-ELYSEE	C-ELYSEE (R3)	SRS (Autoliv Central Airbag)	●	●	●	●	●
C-ELYSEE	C-ELYSEE (R3)	TCM (Automatic Gearbox AL4 TA2000)	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	ABS (Anti-lock brake System)	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	AC (Air Conditioning)	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	ALM (Anti-theft Alarm)	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	BSI (Built-in Systems Interface)	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	CD (CD Player)	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	DDM (Driver's Door Module)	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	ECM (Engine Control Module)	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	EPS (Electric Power Steering)	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	ERU (Engine Relay Unit)	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	HFC (Hands Free Control Kit)	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	IP (Instrument Cluster Panel)	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	MULS (Multifunction Screen)	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	PAM (Parking Assistance)	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	PDM (Passenger's Door Module)	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	Radio	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	SRS (Airbag)	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	SWFCC (Steering Wheel With Fixed Central Controls)	●	●	●	●	●

C-QUATRE	C-QUATRE (4)	TCM (Automatic Gearbox AL4)	●	●	●	●	●
C-QUATRE	C-QUATRE (4)	TEU (Telematics Unit RT3)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	ABS (Anti-lock brake System)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	AC (Air Conditioning)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	ALM (Anti-theft Alarm)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	BSI (Built-in Systems Interface)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	CD (CD Player)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	DDM (Driver's Door Module)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	ECM (Engine Control Module)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	EPS (Electric Power Steering)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	ERU (Engine Relay Unit)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	HFC (Hands Free Control Kit)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	IP (Instrument Cluster Panel)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	MULS (Multifunction Screen)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	PAM (Parking Assistance)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	PDM (Passenger's Door Module)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	Radio	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	SRS (Airbag)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	SWFCC (Steering Wheel With Fixed Central Controls)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	TCM (Automatic Gearbox AL4)	●	●	●	●	●
C-QUATRE	C-QUATRE (5)	TEU (Telematics Unit RT4)	●	●	●	●	●
C-TRIOMPHE		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	●	●	●	●	●
C-TRIOMPHE		AC (Air Conditioning)	●	●	●	●	●
C-TRIOMPHE		Alarm	●	●	●	●	●
C-TRIOMPHE		BSI (Built-in Systems Interface)	●	●	●	●	●
C-TRIOMPHE		CD (CD Player)	●	●	●	●	●
C-TRIOMPHE		DDM (Driver's Door Module)	●	●	●	●	●
C-TRIOMPHE		DHL (Directional Headlamps)	●	●	●	●	●
C-TRIOMPHE		ECM (Engine Control Module)	●	●	●	●	●
C-TRIOMPHE		EPS (Electric Power Steering)	●	●	●	●	●
C-TRIOMPHE		ERU (Engine Relay Unit)	●	●	●	●	●
C-TRIOMPHE		HFC (Hands Free Control Kit)	●	●	●	●	●
C-TRIOMPHE		IP (Instrument Cluster Panel)	●	●	●	●	●
C-TRIOMPHE		MULD (Multifunction Display C)	●	●	●	●	●
C-TRIOMPHE		PAM (Parking Assistance)	●	●	●	●	●
C-TRIOMPHE		PDM (Passenger's Door Module)	●	●	●	●	●
C-TRIOMPHE		RLS (Rain And Light Sensor)	●	●	●	●	●
C-TRIOMPHE		Radio	●	●	●	●	●
C-TRIOMPHE		SRS (Airbag)	●	●	●	●	●
C-TRIOMPHE		SWFCC (Steering Wheel With Fixed Central Controls)	●	●	●	●	●
C-TRIOMPHE		TCM (Automatic Gearbox)	●	●	●	●	●
C-TRIOMPHE		TEU (Telematics Unit RT3)	●	●	●	●	●
C-TRIOMPHE		TRU (Trailer Relay Unit)	●	●	●	●	●
C-ZERO		ABS (Anti-lock brake System)	●	●	●	●	●
C-ZERO		AC (Air Conditioning)	●	●	●	●	●
C-ZERO		BATT (Onboard Charger Of The Traction Battery)	●	●	●	●	●
C-ZERO		BATT (Traction Battery ECU)	●	●	●	●	●
C-ZERO		BATT-01 (Traction Battery Cells Management (Module 01))	●	●	●	●	●
C-ZERO		BATT-02 (Traction Battery Cells Management (Module 02))	●	●	●	●	●
C-ZERO		BATT-03 (Traction Battery Cells Management (Module 03))	●	●	●	●	●
C-ZERO		BATT-04 (Traction Battery Cells Management (Module 04))	●	●	●	●	●
C-ZERO		BATT-05 (Traction Battery Cells Management (Module 05))	●	●	●	●	●
C-ZERO		BATT-07 (Traction Battery Cells Management (Module 07))	●	●	●	●	●
C-ZERO		BATT-08 (Traction Battery Cells Management (Module 08))	●	●	●	●	●
C-ZERO		BATT-09 (Traction Battery Cells Management (Module 09))	●	●	●	●	●
C-ZERO		BATT-10 (Traction Battery Cells Management (Module 10))	●	●	●	●	●
C-ZERO		BATT-11 (Traction Battery Cells Management (Module 11))	●	●	●	●	●
C-ZERO		DVT (Direct Voltage (DC/DC) Transformer)	●	●	●	●	●
C-ZERO		EMM (Electric Machine Management ECU)	●	●	●	●	●
C-ZERO		EPS (Electric Power Steering)	●	●	●	●	●
C-ZERO		EVM (Electric Vehicle Management ECU)	●	●	●	●	●

C-ZERO		GWH (Gateway Wiring Housing)	●	●	●	●	●
C-ZERO		IP (Instrument Cluster Panel)	●	●	●	●	●
C-ZERO		Radio	●	●	●	●	●
C-ZERO		SAS (Steering Wheel Angle Sensor)	●	●	●	●	●
C-ZERO		SM (Services Module)	●	●	●	●	●
C-ZERO		SRS (Airbag)	●	●	●	●	●
C1	C1 (B0)	ABS (Anti-lock brake System)	●	●	●	●	●
C1	C1 (B0)	ECM (Engine Control Module)	●	●	●	●	●
C1	C1 (B0)	EPS (Electric Power Steering)	●	●	●	●	●
C1	C1 (B0)	IMMO (Locking And Immobiliser Control Module)	●	●	●	●	●
C1	C1 (B0)	Radio	●	●	●	●	●
C1	C1 (B0)	SRS (Airbag)	●	●	●	●	●
C1	C1 (B0)	TCM (Automatic Gearbox)	●	●	●	●	●
C1	C1 (B4)	ABS (Anti-lock brake System)	●	●	●	●	●
C1	C1 (B4)	AC (Air Conditioning)	●	●	●	●	●
C1	C1 (B4)	ECM (Engine Control Module)	●	●	●	●	●
C1	C1 (B4)	EPS (Electric Power Steering)	●	●	●	●	●
C1	C1 (B4)	IMMO/HFSM (Engine Immobiliser\Hands Free Starting Access Electric Module)	●	●	●	●	●
C1	C1 (B4)	IP (Instrument Cluster Panel)	●	●	●	●	●
C1	C1 (B4)	MULC/RD (Multifunction Video Camera And Remote Detection By Laser Assembly)	●	●	●	●	●
C1	C1 (B4)	MULS (Multifunction Screen)	●	●	●	●	●
C1	C1 (B4)	SRS (Airbag)	●	●	●	●	●
C1	C1 (B4)	SSC (Stop And Start Control ECU)	●	●	●	●	●
C1	C1 (B4)	TCM (Automatic Gearbox)	●	●	●	●	●
C15		ECM (1.9L WJY LUCAS DCN2)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	ABS (Anti-lock brake System)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	AC (Air Conditioning)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	Alarm	●	●	●	●	●
C2	C2 (CAN) (2006 - )	BSI (Built-in Systems Interface)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	CD (CD Player)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	ECM (Engine Control Module)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	EPS (Electric Power Steering)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	ERU (Engine Relay Unit)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	HFC (Hands Free Control Kit)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	HFR (High Frequency Receiver)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	IP (Instrument Cluster Panel)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	MULS (Multifunction Screen C)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	PAM (Parking Assistance)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	Radio	●	●	●	●	●
C2	C2 (CAN) (2006 - )	SRS (Airbag)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	SSC (ECU Reversible Stopstart Alternator)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	SWSM (Switch Module At The Steering Wheel)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	TCM (Controlled Manual Gearbox ECU)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	TEU (Telematics Unit RT4)	●	●	●	●	●
C2	C2 (CAN) (2006 - )	TRU (Trailer Relay Unit)	●	●	●	●	●
C2	C2 (CHINA)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	●	●	●	●	●
C2	C2 (CHINA)	AC (Air Conditioning)	●	●	●	●	●
C2	C2 (CHINA)	BSI (Built-in Systems Interface)	●	●	●	●	●
C2	C2 (CHINA)	ECM (Engine Control Module)	●	●	●	●	●
C2	C2 (CHINA)	IP (Instrument Cluster Panel)	●	●	●	●	●
C2	C2 (CHINA)	SRS (Airbag)	●	●	●	●	●
C2	C2 (CHINA)	SWFCC (Steering Wheel With Fixed Central Controls)	●	●	●	●	●
C2	C2 (CHINA)	TCM (Automatic Gearbox AL4 TA2000)	●	●	●	●	●
C2	C2 (VAN) (2003 - 2006)	ABS (Anti-lock brake System TEVES MK70)	●	●	●	●	●
C2	C2 (VAN) (2003 - 2006)	AC (Air Conditioning)	●	●	●	●	●
C2	C2 (VAN) (2003 - 2006)	Alarm	●	●	●	●	●
C2	C2 (VAN) (2003 - 2006)	BSI (Built-in Systems Interface)	●	●	●	●	●
C2	C2 (VAN) (2003 - 2006)	CD (CD Player)	●	●	●	●	●
C2	C2 (VAN) (2003 - 2006)	ECM (Engine Control Module)	●	●	●	●	●
C2	C2 (VAN) (2003 - 2006)	EPS (Electric Power Steering)	●	●	●	●	●
C2	C2 (VAN) (2003 - 2006)	ESP (Electronic Stability Program TEVES MK60)	●	●	●	●	●

C2	C2 (VAN) (2003 - 2006)	IP (Instrument Cluster Panel)	●	●	●	●	●
C2	C2 (VAN) (2003 - 2006)	MULS (Multifunction Screen A)	●	●	●	●	●
C2	C2 (VAN) (2003 - 2006)	PAM (Parking Assistance)	●	●	●	●	●
C2	C2 (VAN) (2003 - 2006)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C2	C2 (VAN) (2003 - 2006)	Radio	●	●	●	●	●
C2	C2 (VAN) (2003 - 2006)	SRS (Airbag)	●	●	●	●	●
C2	C2 (VAN) (2003 - 2006)	SWSM (Switch Module Under Steering Wheel)	●	●	●	●	●
C2	C2 (VAN) (2003 - 2006)	TCM (Controlled Manual Gearbox ECU)	●	●	●	●	●
C2	C2 (VAN) (2003 - 2006)	TEU (Telematics Unit)	●	●	●	●	●
C3	C3 (2002 - 2006)	ABS (Anti-lock brake System TEVES MK70)	●	●	●	●	●
C3	C3 (2002 - 2006)	ABS (Anti-lock brake System)	●	●	●	●	●
C3	C3 (2002 - 2006)	AC (Air Conditioning)	●	●	●	●	●
C3	C3 (2002 - 2006)	ADDG02	●	●	●	●	●
C3	C3 (2002 - 2006)	ALM (Anti-theft Alarm)	●	●	●	●	●
C3	C3 (2002 - 2006)	ASM (Anti-slip Mode Selector)	●	●	●	●	●
C3	C3 (2002 - 2006)	Alarm	●	●	●	●	●
C3	C3 (2002 - 2006)	BATT (Battery Change Status Unit)	●	●	●	●	●
C3	C3 (2002 - 2006)	BATT (Battery Charge Status Unit)	●	●	●	●	●
C3	C3 (2002 - 2006)	BSI (Built-in Systems Interface)	●	●	●	●	●
C3	C3 (2002 - 2006)	CD (CD Player)	●	●	●	●	●
C3	C3 (2002 - 2006)	CD (External CD Player)	●	●	●	●	●
C3	C3 (2002 - 2006)	DDM (Driver's Door Module)	●	●	●	●	●
C3	C3 (2002 - 2006)	DSM (Driver's School Module)	●	●	●	●	●
C3	C3 (2002 - 2006)	Display	●	●	●	●	●
C3	C3 (2002 - 2006)	ECM (Engine Control Module)	●	●	●	●	●
C3	C3 (2002 - 2006)	EPS (Electric Power Steering)	●	●	●	●	●
C3	C3 (2002 - 2006)	ERU (Engine Relay Unit)	●	●	●	●	●
C3	C3 (2002 - 2006)	ESL (Electric Steering Lock)	●	●	●	●	●
C3	C3 (2002 - 2006)	HFC (Hands Free Control Kit)	●	●	●	●	●
C3	C3 (2002 - 2006)	HFC (Hands free Control Unit)	●	●	●	●	●
C3	C3 (2002 - 2006)	HFR (High Frequency Receiver)	●	●	●	●	●
C3	C3 (2002 - 2006)	HHV (High Head Vision)	●	●	●	●	●
C3	C3 (2002 - 2006)	IP (Instrument Cluster Panel)	●	●	●	●	●
C3	C3 (2002 - 2006)	KEY (Electronic Key Reader)	●	●	●	●	●
C3	C3 (2002 - 2006)	MCP (Multiplexed Control Panel)	●	●	●	●	●
C3	C3 (2002 - 2006)	MDAP (Multiplexed Diesel Additive Pump)	●	●	●	●	●
C3	C3 (2002 - 2006)	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
C3	C3 (2002 - 2006)	MULD (Multifunction Display SAGEM A)	●	●	●	●	●
C3	C3 (2002 - 2006)	MULD (Multifunction Display)	●	●	●	●	●
C3	C3 (2002 - 2006)	MULS (Multifunction Screen A)	●	●	●	●	●
C3	C3 (2002 - 2006)	MULS (Multifunction Screen C)	●	●	●	●	●
C3	C3 (2002 - 2006)	PAM (Parking Assistance)	●	●	●	●	●
C3	C3 (2002 - 2006)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C3	C3 (2002 - 2006)	RLS (Rain And Light Sensor)	●	●	●	●	●
C3	C3 (2002 - 2006)	Radio	●	●	●	●	●
C3	C3 (2002 - 2006)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●	●
C3	C3 (2002 - 2006)	SB (Seat Belts Reminder LED)	●	●	●	●	●
C3	C3 (2002 - 2006)	SM (Services Module)	●	●	●	●	●
C3	C3 (2002 - 2006)	SRS (Airbag)	●	●	●	●	●
C3	C3 (2002 - 2006)	SRS (SAC TEMIC)	●	●	●	●	●
C3	C3 (2002 - 2006)	SVLCU (Stolen Vehicle Location Control)	●	●	●	●	●
C3	C3 (2002 - 2006)	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
C3	C3 (2002 - 2006)	SWSM (Switch Module At The Steering Wheel)	●	●	●	●	●
C3	C3 (2002 - 2006)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C3	C3 (2002 - 2006)	Siren	●	●	●	●	●
C3	C3 (2002 - 2006)	TCM (Automatic Gearbox)	●	●	●	●	●
C3	C3 (2002 - 2006)	TCM (Controlled Manual Gearbox ECU)	●	●	●	●	●
C3	C3 (2002 - 2006)	TEU (Telematics Unit Independent)	●	●	●	●	●
C3	C3 (2002 - 2006)	TEU (Telematics Unit RT3)	●	●	●	●	●
C3	C3 (2002 - 2006)	TEU (Telematics Unit RT5)	●	●	●	●	●
C3	C3 (2002 - 2006)	TEU (Telematics Unit)	●	●	●	●	●
C3	C3 (2002 - 2006)	TRU (Trailer Relay Unit)	●	●	●	●	●

C3	C3 (2002 - 2006)	VRD (Voltage Retaining Device)	●	●	●	●	●
C3	C3 (A51)	ABS (Anti-lock brake System)	●	●	●	●	●
C3	C3 (A51)	AC (Air Conditioning)	●	●	●	●	●
C3	C3 (A51)	ALM (Anti-theft Alarm)	●	●	●	●	●
C3	C3 (A51)	BATT (Battery Charge Status Unit)	●	●	●	●	●
C3	C3 (A51)	BSI (Built-in Systems Interface)	●	●	●	●	●
C3	C3 (A51)	DDM (Driver's Door Module)	●	●	●	●	●
C3	C3 (A51)	DSM (Driver's School Module)	●	●	●	●	●
C3	C3 (A51)	ECM (Engine Control Module)	●	●	●	●	●
C3	C3 (A51)	EPS (Electric Power Steering)	●	●	●	●	●
C3	C3 (A51)	ERU (Engine Relay Unit)	●	●	●	●	●
C3	C3 (A51)	HFC (Hands Free Control Kit)	●	●	●	●	●
C3	C3 (A51)	HFR (High Frequency Receiver)	●	●	●	●	●
C3	C3 (A51)	IP (Instrument Cluster Panel)	●	●	●	●	●
C3	C3 (A51)	MDAP (Multiplexed Diesel Additive Pump)	●	●	●	●	●
C3	C3 (A51)	MULD (Multifunction Display)	●	●	●	●	●
C3	C3 (A51)	PAM (Parking Assistance)	●	●	●	●	●
C3	C3 (A51)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C3	C3 (A51)	Radio	●	●	●	●	●
C3	C3 (A51)	SB (Seat Belts Reminder LED)	●	●	●	●	●
C3	C3 (A51)	SM (Services Module)	●	●	●	●	●
C3	C3 (A51)	SRS (Airbag)	●	●	●	●	●
C3	C3 (A51)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C3	C3 (A51)	TCM (Automatic Gearbox)	●	●	●	●	●
C3	C3 (A51)	TEU (Telematics Unit Independent)	●	●	●	●	●
C3	C3 (A51)	TEU (Telematics Unit)	●	●	●	●	●
C3	C3 (A51)	TRU (Trailer Relay Unit)	●	●	●	●	●
C3	C3 (A51)	VRD (Voltage Retaining Device)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	ABS (Anti-lock brake System)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	AC (Air Conditioning)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	ASM (Anti-slip Mode Selector)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	BATT (Battery Charge Status Unit)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	BSI (Built-in Systems Interface)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	CD (External CD Player)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	DDM (Driver's Door Module)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	Display	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	ECM (Engine Control Module)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	ESL (Electric Steering Lock)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	HHV (High Head Vision)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	IP (Instrument Cluster Panel)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	MCP (Multiplexed Control Panel)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	MDAP (Multiplexed Diesel Additive Pump)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	PAM (Parking Assistance)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	RLS (Rain And Light Sensor)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	SM (Services Module)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	Siren	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	TCM (Automatic Gearbox)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	TRU (Trailer Relay Unit)	●	●	●	●	●
C3	C3 (AIRCROSS) (A88)	VRD (Voltage Retaining Device)	●	●	●	●	●
C3	C3 (AIRCROSS) (Ai58)	ABS (Anti-lock brake System)	●	●	●	●	●
C3	C3 (AIRCROSS) (Ai58)	AC (Air Conditioning)	●	●	●	●	●
C3	C3 (AIRCROSS) (Ai58)	Alarm	●	●	●	●	●
C3	C3 (AIRCROSS) (Ai58)	BSI (Built-in Systems Interface)	●	●	●	●	●
C3	C3 (AIRCROSS) (Ai58)	ECM (Engine Control Module)	●	●	●	●	●
C3	C3 (AIRCROSS) (Ai58)	EPS (Electric Power Steering)	●	●	●	●	●
C3	C3 (AIRCROSS) (Ai58)	IP (Instrument Cluster Panel)	●	●	●	●	●
C3	C3 (AIRCROSS) (Ai58)	PAM (Parking Assistance)	●	●	●	●	●
C3	C3 (AIRCROSS) (Ai58)	RBS (Rain And Brightness Sensor)	●	●	●	●	●

C3	C3 (AIRCROSS) (Ai58)	Radio	●	●	●	●	●
C3	C3 (AIRCROSS) (Ai58)	SM (Services Module)	●	●	●	●	●
C3	C3 (AIRCROSS) (Ai58)	SRS (Airbag)	●	●	●	●	●
C3	C3 (AIRCROSS) (Ai58)	SVLCU (Stolen Vehicle Location Control)	●	●	●	●	●
C3	C3 (AIRCROSS) (Ai58)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C3	C3 (AIRCROSS) (Ai58)	TCM (Automatic Gearbox)	●	●	●	●	●
C3	C3 (AIRCROSS) (Ai58)	TEU (Telematics Unit)	●	●	●	●	●
C3	C3 (AIRCROSS) (Ai58)	TRU (Trailer Relay Unit)	●	●	●	●	●
C3	C3 (Ai51)	ABS (Anti-lock brake System)	●	●	●	●	●
C3	C3 (Ai51)	AC (Air Conditioning)	●	●	●	●	●
C3	C3 (Ai51)	ALM (Anti-theft Alarm)	●	●	●	●	●
C3	C3 (Ai51)	BSI (Built-in Systems Interface)	●	●	●	●	●
C3	C3 (Ai51)	ECM (Engine Control Module)	●	●	●	●	●
C3	C3 (Ai51)	EPS (Electric Power Steering)	●	●	●	●	●
C3	C3 (Ai51)	IP (Instrument Cluster Panel)	●	●	●	●	●
C3	C3 (Ai51)	PAM (Parking Assistance)	●	●	●	●	●
C3	C3 (Ai51)	RBS (Rain And Brightness Sensor(CDPL))	●	●	●	●	●
C3	C3 (Ai51)	Radio	●	●	●	●	●
C3	C3 (Ai51)	SM (Services Module)	●	●	●	●	●
C3	C3 (Ai51)	SRS (Airbag)	●	●	●	●	●
C3	C3 (Ai51)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C3	C3 (Ai51)	TCM (Automatic Gearbox)	●	●	●	●	●
C3	C3 (Ai51)	TEU (Telematics Unit)	●	●	●	●	●
C3	C3 (Ai51)	TRU (Trailer Relay Unit)	●	●	●	●	●
C3	C3 (B618)	ABS (Anti-lock brake System)	●	●	●	●	●
C3	C3 (B618)	AC (Air Conditioning)	●	●	●	●	●
C3	C3 (B618)	BATT (Battery Charge Status Unit)	●	●	●	●	●
C3	C3 (B618)	BSI (Built-in Systems Interface)	●	●	●	●	●
C3	C3 (B618)	CD (External CD Player)	●	●	●	●	●
C3	C3 (B618)	ECM (Engine Control Module)	●	●	●	●	●
C3	C3 (B618)	ESL (Electric Steering Lock)	●	●	●	●	●
C3	C3 (B618)	IP (Instrument Cluster Panel)	●	●	●	●	●
C3	C3 (B618)	MCP (Multiplexed Control Panel)	●	●	●	●	●
C3	C3 (B618)	MDAP (Multiplexed Diesel Additive Pump)	●	●	●	●	●
C3	C3 (B618)	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
C3	C3 (B618)	MULD (Multifunction Display)	●	●	●	●	●
C3	C3 (B618)	PAM (Parking Assistance)	●	●	●	●	●
C3	C3 (B618)	RLS (Rain And Light Sensor)	●	●	●	●	●
C3	C3 (B618)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●	●
C3	C3 (B618)	SM (Services Module)	●	●	●	●	●
C3	C3 (B618)	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
C3	C3 (B618)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C3	C3 (B618)	Siren	●	●	●	●	●
C3	C3 (B618)	TCM (Automatic Gearbox)	●	●	●	●	●
C3	C3 (B618)	TRU (Trailer Relay Unit)	●	●	●	●	●
C3	C3 (B618)	VRD (Voltage Retaining Device)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	ABS (Anti-lock brake System)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	AC (Air Conditioning)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	ALM (Anti-theft Alarm)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	BATT (Battery Change Status Unit)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	BSI (Built-in Systems Interface)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	DDM (Driver's Door Module)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	ECM (Engine Control Module)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	EPS (Electric Power Steering)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	ERU (Engine Relay Unit)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	HFC (Hands Free Control Kit)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	HFR (High Frequency Receiver)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	IP (Instrument Cluster Panel)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	MDAP (Multiplexed Diesel Additive Pump)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	MULS (Multifunction Screen)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	PAM (Parking Assistance)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	RBS (Rain And Brightness Sensor)	●	●	●	●	●



C3	C3 (PICASSO) (A58)	Radio	●	●	●	●	●
C3	C3 (PICASSO) (A58)	SB (Seat Belts Reminder LED)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	SM (Services Module)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	SRS (Airbag)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C3	C3 (PICASSO) (A58)	TCM (Automatic Gearbox)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	TEU (Telematics Unit)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	TRU (Trailer Relay Unit)	●	●	●	●	●
C3	C3 (PICASSO) (A58)	VRD (Voltage Retaining Device)	●	●	●	●	●
C3	C3 (PICASSO) (Ai58)	ABS (Anti-lock brake System)	●	●	●	●	●
C3	C3 (PICASSO) (Ai58)	AC (Air Conditioning)	●	●	●	●	●
C3	C3 (PICASSO) (Ai58)	ALM (Anti-theft Alarm)	●	●	●	●	●
C3	C3 (PICASSO) (Ai58)	BSI (Built-in Systems Interface)	●	●	●	●	●
C3	C3 (PICASSO) (Ai58)	ECM (Engine Control Module)	●	●	●	●	●
C3	C3 (PICASSO) (Ai58)	EPS (Electric Power Steering)	●	●	●	●	●
C3	C3 (PICASSO) (Ai58)	IP (Instrument Cluster Panel)	●	●	●	●	●
C3	C3 (PICASSO) (Ai58)	PAM (Parking Assistance)	●	●	●	●	●
C3	C3 (PICASSO) (Ai58)	RBS (Rain And Brightness Sensor(CDPL))	●	●	●	●	●
C3	C3 (PICASSO) (Ai58)	Radio	●	●	●	●	●
C3	C3 (PICASSO) (Ai58)	SM (Services Module)	●	●	●	●	●
C3	C3 (PICASSO) (Ai58)	SRS (Airbag)	●	●	●	●	●
C3	C3 (PICASSO) (Ai58)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C3	C3 (PICASSO) (Ai58)	TCM (Automatic Gearbox)	●	●	●	●	●
C3	C3 (PICASSO) (Ai58)	TEU (Telematics Unit)	●	●	●	●	●
C3	C3 (PICASSO) (Ai58)	TRU (Trailer Relay Unit)	●	●	●	●	●
C3	C3 (PLURIEL) (2002 - 2009)	ABS (Anti-lock brake System)	●	●	●	●	●
C3	C3 (PLURIEL) (2002 - 2009)	AC (Air Conditioning)	●	●	●	●	●
C3	C3 (PLURIEL) (2002 - 2009)	BSI (Built-in Systems Interface)	●	●	●	●	●
C3	C3 (PLURIEL) (2002 - 2009)	CD (CD Player)	●	●	●	●	●
C3	C3 (PLURIEL) (2002 - 2009)	ECM (Engine Control Module)	●	●	●	●	●
C3	C3 (PLURIEL) (2002 - 2009)	EPS (Electric Power Steering)	●	●	●	●	●
C3	C3 (PLURIEL) (2002 - 2009)	ERU (Engine Relay Unit)	●	●	●	●	●
C3	C3 (PLURIEL) (2002 - 2009)	HFC (Hands Free Control Kit)	●	●	●	●	●
C3	C3 (PLURIEL) (2002 - 2009)	IP (Instrument Cluster Panel)	●	●	●	●	●
C3	C3 (PLURIEL) (2002 - 2009)	MULS (Multifunction Screen C)	●	●	●	●	●
C3	C3 (PLURIEL) (2002 - 2009)	PAM (Parking Assistance)	●	●	●	●	●
C3	C3 (PLURIEL) (2002 - 2009)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C3	C3 (PLURIEL) (2002 - 2009)	Radio	●	●	●	●	●
C3	C3 (PLURIEL) (2002 - 2009)	SRS (SAC TEMIC)	●	●	●	●	●
C3	C3 (PLURIEL) (2002 - 2009)	SWSM(Switch Module At The Steering Wheel)	●	●	●	●	●
C3	C3 (PLURIEL) (2002 - 2009)	TCM (Controlled Manual Gearbox ECU)	●	●	●	●	●
C3	C3 (PLURIEL) (2002 - 2009)	TEU (Telematics Unit RT5)	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	ABS (Anti-lock brake System)	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	AC (Air Conditioning)	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	Alarm	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	BSI (Built-in Systems Interface)	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	CD (CD Player)	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	ECM (Engine Control Module)	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	EPS (Electric Power Steering)	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	ERU (Engine Relay Unit)	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	HFC (Hands Free Control Kit)	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	IP (Instrument Cluster Panel)	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	MULS (Multifunction Screen A)	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	PAM (Parking Assistance)	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	Radio	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	SRS (SAC TEMIC)	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	SWSM(Switch Module At The Steering Wheel)	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	TCM (Automatic Gearbox)	●	●	●	●	●
C3	C3 (R) (2006 - 2009)	TEU (Telematics Unit RT3)	●	●	●	●	●
C3	C3 (XR)	ABS (Anti-lock brake System)	●	●	●	●	●
C3	C3 (XR)	ASM (Anti-slip Mode Selector)	●	●	●	●	●

C3	C3 (XR)	BATT (Battery Charge Status Unit)	●	●	●	●	●
C3	C3 (XR)	BSI (Built-in Systems Interface)	●	●	●	●	●
C3	C3 (XR)	ECM (Engine Control Module)	●	●	●	●	●
C3	C3 (XR)	EPS (Electric Power Steering)	●	●	●	●	●
C3	C3 (XR)	ESL (Electric Steering Lock)	●	●	●	●	●
C3	C3 (XR)	HFC (Hands free Control Unit)	●	●	●	●	●
C3	C3 (XR)	IP (Instrument Cluster Panel)	●	●	●	●	●
C3	C3 (XR)	KEY (Electronic Key Reader)	●	●	●	●	●
C3	C3 (XR)	MCP (Multiplexed Control Panel)	●	●	●	●	●
C3	C3 (XR)	MULS (Multifunction Screen)	●	●	●	●	●
C3	C3 (XR)	PAM (Parking Assistance)	●	●	●	●	●
C3	C3 (XR)	Radio	●	●	●	●	●
C3	C3 (XR)	SM (Services Module)	●	●	●	●	●
C3	C3 (XR)	SRS (Airbag)	●	●	●	●	●
C3	C3 (XR)	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
C3	C3 (XR)	SWSM(Switch Module Under The Steering Wheel)	●	●	●	●	●
C3	C3 (XR)	TCM (Automatic Gearbox)	●	●	●	●	●
C3	C3 (XR)	TEU (Telematics Unit)	●	●	●	●	●
C3	C3 (XR)	VRD (Voltage Retaining Device)	●	●	●	●	●
C4	C4 (2004 - 2010)	ABS (Anti-lock brake System)	●	●	●	●	●
C4	C4 (2004 - 2010)	AC (Air Conditioning)	●	●	●	●	●
C4	C4 (2004 - 2010)	ALM (Anti-theft Alarm)	●	●	●	●	●
C4	C4 (2004 - 2010)	AMP (Audio Amplifier)	●	●	●	●	●
C4	C4 (2004 - 2010)	ASM (Anti-slip Mode Selector)	●	●	●	●	●
C4	C4 (2004 - 2010)	AUTH (Starting Authorisation ECU)	●	●	●	●	●
C4	C4 (2004 - 2010)	BATT (Battery Charge Status Unit)	●	●	●	●	●
C4	C4 (2004 - 2010)	BATT (Battery Charge Status Unit)	●	●	●	●	●
C4	C4 (2004 - 2010)	BCM (Body Control Module)	●	●	●	●	●
C4	C4 (2004 - 2010)	BSI (Built-in Systems Interface)	●	●	●	●	●
C4	C4 (2004 - 2010)	BSM (Monitoring Of The Blind Spot)	●	●	●	●	●
C4	C4 (2004 - 2010)	CD (CD Player)	●	●	●	●	●
C4	C4 (2004 - 2010)	CD (External CD Player)	●	●	●	●	●
C4	C4 (2004 - 2010)	DAF (Diesel Additive Function)	●	●	●	●	●
C4	C4 (2004 - 2010)	DDM (Driver's Door Module)	●	●	●	●	●
C4	C4 (2004 - 2010)	DHL (Directional Headlamps)	●	●	●	●	●
C4	C4 (2004 - 2010)	DPCRF (Rear Final Drive Piloted Clutch)	●	●	●	●	●
C4	C4 (2004 - 2010)	DSM (Driver's School Module)	●	●	●	●	●
C4	C4 (2004 - 2010)	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
C4	C4 (2004 - 2010)	Display/Telematics	●	●	●	●	●
C4	C4 (2004 - 2010)	ECM (Engine Control Module)	●	●	●	●	●
C4	C4 (2004 - 2010)	EPB (Electric Secondary Brake)	●	●	●	●	●
C4	C4 (2004 - 2010)	EPS (Electric Power Steering Electric Pump Unit)	●	●	●	●	●
C4	C4 (2004 - 2010)	EPS (Electric Power Steering)	●	●	●	●	●
C4	C4 (2004 - 2010)	ERU (Engine Relay Unit)	●	●	●	●	●
C4	C4 (2004 - 2010)	ESL (Electric Steering Lock)	●	●	●	●	●
C4	C4 (2004 - 2010)	HFC (Hands Free Control Kit)	●	●	●	●	●
C4	C4 (2004 - 2010)	HFC (Hands free Control Unit)	●	●	●	●	●
C4	C4 (2004 - 2010)	HFR (High Frequency Receiver)	●	●	●	●	●
C4	C4 (2004 - 2010)	IMMO (Locking And Immobiliser Control Module)	●	●	●	●	●
C4	C4 (2004 - 2010)	IP (Instrument Cluster Panel)	●	●	●	●	●
C4	C4 (2004 - 2010)	KEY (Electronic Key Reader)	●	●	●	●	●
C4	C4 (2004 - 2010)	LDWS (Lane Departure Warning System)	●	●	●	●	●
C4	C4 (2004 - 2010)	LPU (Lighting Pack Unit)	●	●	●	●	●
C4	C4 (2004 - 2010)	List_VEH_C_C4_SEDAN	●	●	●	●	●
C4	C4 (2004 - 2010)	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●	●
C4	C4 (2004 - 2010)	MCP (Multiplexed Control Panel)	●	●	●	●	●
C4	C4 (2004 - 2010)	MDAP (Multiplexed Diesel Additive Pump)	●	●	●	●	●
C4	C4 (2004 - 2010)	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
C4	C4 (2004 - 2010)	MULC (Multifunction Camera Or Multifunction Video Camera)	●	●	●	●	●
C4	C4 (2004 - 2010)	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
C4	C4 (2004 - 2010)	MULD (Multifunction Display)	●	●	●	●	●
C4	C4 (2004 - 2010)	MULS (Multifunction Screen)	●	●	●	●	●

C4	C4 (2004 - 2010)	NAVI (Navigation)	●	●	●	●	●
C4	C4 (2004 - 2010)	PAM (Parking Assistance)	●	●	●	●	●
C4	C4 (2004 - 2010)	PDM (Passenger's Door Module)	●	●	●	●	●
C4	C4 (2004 - 2010)	PVA (Panoramic Visual Assistance ECU)	●	●	●	●	●
C4	C4 (2004 - 2010)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C4	C4 (2004 - 2010)	RCU (Rev Counter Unit)	●	●	●	●	●
C4	C4 (2004 - 2010)	RLS (Rain And Light Sensor)	●	●	●	●	●
C4	C4 (2004 - 2010)	ROR (Radio Or Radiotelephone(Radio Part))	●	●	●	●	●
C4	C4 (2004 - 2010)	Radio	●	●	●	●	●
C4	C4 (2004 - 2010)	SAS (Steering Wheel Angle Sensor)	●	●	●	●	●
C4	C4 (2004 - 2010)	SB (LH Reversible Seat Belt Reel)	●	●	●	●	●
C4	C4 (2004 - 2010)	SB (RH Reversible Seat Belt Reel)	●	●	●	●	●
C4	C4 (2004 - 2010)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●	●
C4	C4 (2004 - 2010)	SFB (Signalling Fuse Box)	●	●	●	●	●
C4	C4 (2004 - 2010)	SM (Services Module)	●	●	●	●	●
C4	C4 (2004 - 2010)	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
C4	C4 (2004 - 2010)	SRS (Airbag)	●	●	●	●	●
C4	C4 (2004 - 2010)	SSC (Calculation Stop And Sart)	●	●	●	●	●
C4	C4 (2004 - 2010)	SSP (Pneumatic Suspension)	●	●	●	●	●
C4	C4 (2004 - 2010)	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
C4	C4 (2004 - 2010)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C4	C4 (2004 - 2010)	SWSM (Switch Module Under The Steering Wheel)	●	●	●	●	●
C4	C4 (2004 - 2010)	Siren	●	●	●	●	●
C4	C4 (2004 - 2010)	TCM (Automatic Gearbox)	●	●	●	●	●
C4	C4 (2004 - 2010)	TEU (Telematics Unit SMEG_PLUS)	●	●	●	●	●
C4	C4 (2004 - 2010)	TEU (Telematics Unit)	●	●	●	●	●
C4	C4 (2004 - 2010)	TRU (Trailer Relay Unit)	●	●	●	●	●
C4	C4 (2004 - 2010)	TS (Touch Screen)	●	●	●	●	●
C4	C4 (2004 - 2010)	UID (Under Inflation Detection(Dsg))	●	●	●	●	●
C4	C4 (2004 - 2010)	VDA (Vehicle Distance Assistance)	●	●	●	●	●
C4	C4 (2004 - 2010)	VRD (Voltage Retaining Device)	●	●	●	●	●
C4	C4 (2004 - 2010)	Wiper (Windscreen Wiper)	●	●	●	●	●
C4	C4 (AIRCROSS)	ABS (Anti-lock brake System)	●	●	●	●	●
C4	C4 (AIRCROSS)	AC (Air Conditioning)	●	●	●	●	●
C4	C4 (AIRCROSS)	ALM (Anti-theft Alarm)	●	●	●	●	●
C4	C4 (AIRCROSS)	AUTH (Starting Authorisation ECU)	●	●	●	●	●
C4	C4 (AIRCROSS)	BSI (Built-in Systems Interface)	●	●	●	●	●
C4	C4 (AIRCROSS)	DDM (Driver's Door Module)	●	●	●	●	●
C4	C4 (AIRCROSS)	DHL (Directional Headlamps)	●	●	●	●	●
C4	C4 (AIRCROSS)	DPICRF (Rear Final Drive Piloted Clutch)	●	●	●	●	●
C4	C4 (AIRCROSS)	ECM (Engine Control Module)	●	●	●	●	●
C4	C4 (AIRCROSS)	EPS (Electric Power Steering)	●	●	●	●	●
C4	C4 (AIRCROSS)	IMMO (Locking And Immobiliser Control Module)	●	●	●	●	●
C4	C4 (AIRCROSS)	IP (Instrument Cluster Panel)	●	●	●	●	●
C4	C4 (AIRCROSS)	NAVI (Navigation)	●	●	●	●	●
C4	C4 (AIRCROSS)	PAM (Parking Assistance)	●	●	●	●	●
C4	C4 (AIRCROSS)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C4	C4 (AIRCROSS)	ROR (Radio Or Radiotelephone(Radio Part))	●	●	●	●	●
C4	C4 (AIRCROSS)	SAS (Steering Wheel Angle Sensor)	●	●	●	●	●
C4	C4 (AIRCROSS)	SRS (Airbag)	●	●	●	●	●
C4	C4 (AIRCROSS)	SSC (Calculation Stop And Sart)	●	●	●	●	●
C4	C4 (AIRCROSS)	TCM (Automatic Gearbox)	●	●	●	●	●
C4	C4 (B7) (2010 - )	ABS (Anti-lock brake System)	●	●	●	●	●
C4	C4 (B7) (2010 - )	AC (Air Conditioning)	●	●	●	●	●
C4	C4 (B7) (2010 - )	ALM (Anti-theft Alarm)	●	●	●	●	●
C4	C4 (B7) (2010 - )	AMP (Audio Amplifier)	●	●	●	●	●
C4	C4 (B7) (2010 - )	BATT (Battery Charge Status Unit)	●	●	●	●	●
C4	C4 (B7) (2010 - )	BSI (Built-in Systems Interface)	●	●	●	●	●
C4	C4 (B7) (2010 - )	BSM (Monitoring Of The Blind Spot)	●	●	●	●	●
C4	C4 (B7) (2010 - )	DDM (Driver's Door Module)	●	●	●	●	●
C4	C4 (B7) (2010 - )	DHL (Directional Headlamps)	●	●	●	●	●
C4	C4 (B7) (2010 - )	DSM (Driver's School Module)	●	●	●	●	●

C4	C4 (B7) (2010 - )	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
C4	C4 (B7) (2010 - )	Display/Telematics	●	●	●	●	●
C4	C4 (B7) (2010 - )	ECM (Engine Control Module)	●	●	●	●	●
C4	C4 (B7) (2010 - )	EPB (Electric Secondary Brake)	●	●	●	●	●
C4	C4 (B7) (2010 - )	EPS (Electric Power Steering Electric Pump Unit)	●	●	●	●	●
C4	C4 (B7) (2010 - )	ERU (Engine Relay Unit)	●	●	●	●	●
C4	C4 (B7) (2010 - )	ESL (Electric Steering Lock)	●	●	●	●	●
C4	C4 (B7) (2010 - )	IP (Instrument Cluster Panel)	●	●	●	●	●
C4	C4 (B7) (2010 - )	KEY (Electronic Key Reader)	●	●	●	●	●
C4	C4 (B7) (2010 - )	LDWS (Lane Departure Warning System)	●	●	●	●	●
C4	C4 (B7) (2010 - )	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●	●
C4	C4 (B7) (2010 - )	MCP (Multiplexed Control Panel)	●	●	●	●	●
C4	C4 (B7) (2010 - )	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
C4	C4 (B7) (2010 - )	MULD (Multifunction Display)	●	●	●	●	●
C4	C4 (B7) (2010 - )	PAM (Parking Assistance)	●	●	●	●	●
C4	C4 (B7) (2010 - )	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C4	C4 (B7) (2010 - )	Radio	●	●	●	●	●
C4	C4 (B7) (2010 - )	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●	●
C4	C4 (B7) (2010 - )	SM (Services Module)	●	●	●	●	●
C4	C4 (B7) (2010 - )	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
C4	C4 (B7) (2010 - )	SRS (Airbag)	●	●	●	●	●
C4	C4 (B7) (2010 - )	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
C4	C4 (B7) (2010 - )	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C4	C4 (B7) (2010 - )	TCM (Automatic Gearbox)	●	●	●	●	●
C4	C4 (B7) (2010 - )	TRU (Trailer Relay Unit)	●	●	●	●	●
C4	C4 (B7) (2010 - )	UID (Under Inflation Detection(Dsg))	●	●	●	●	●
C4	C4 (B7) (2010 - )	VRD (Voltage Retaining Device)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	ABS (Anti-lock brake System)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	AC (Air Conditioning)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	ASM (Anti-slip Mode Selector)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	BATT (Battery Charge Status Unit)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	BSI (Built-in Systems Interface)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	ECM (Engine Control Module)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	EPS (Electric Power Steering)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	ESL (Electric Steering Lock)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	HFC (Hands free Control Unit)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	IP (Instrument Cluster Panel)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	KEY (Electronic Key Reader)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	MCP (Multiplexed Control Panel)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	MDAP (Multiplexed Diesel Additive Pump)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	MULD (Multifunction Display)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	PAM (Parking Assistance)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	Radio	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	SM (Services Module)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	SRS (Airbag)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	Siren	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	TCM (Automatic Gearbox)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	TEU (Telematics Unit)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	TRU (Trailer Relay Unit)	●	●	●	●	●
C4	C4 (BZ3) (CHINA)	VRD (Voltage Retaining Device)	●	●	●	●	●
C4	C4 (CACTUS)	ABS (Anti-lock brake System)	●	●	●	●	●
C4	C4 (CACTUS)	AC (Air Conditioning)	●	●	●	●	●
C4	C4 (CACTUS)	BATT (Battery Charge Status Unit)	●	●	●	●	●
C4	C4 (CACTUS)	BSI (Built-in Systems Interface)	●	●	●	●	●
C4	C4 (CACTUS)	CD (External CD Player)	●	●	●	●	●
C4	C4 (CACTUS)	ECM (Engine Control Module)	●	●	●	●	●
C4	C4 (CACTUS)	EPS (Electric Power Steering)	●	●	●	●	●
C4	C4 (CACTUS)	IP (Instrument Cluster Panel)	●	●	●	●	●
C4	C4 (CACTUS)	MCP (Multiplexed Control Panel)	●	●	●	●	●

C4	C4 (CACTUS)	MDAP (Multiplexed Diesel Additive Pump)	●	●	●	●	●
C4	C4 (CACTUS)	MULS (Multifunction Screen)	●	●	●	●	●
C4	C4 (CACTUS)	PAM (Parking Assistance)	●	●	●	●	●
C4	C4 (CACTUS)	RLS (Rain And Light Sensor)	●	●	●	●	●
C4	C4 (CACTUS)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●	●
C4	C4 (CACTUS)	SM (Services Module)	●	●	●	●	●
C4	C4 (CACTUS)	SRS (Airbag)	●	●	●	●	●
C4	C4 (CACTUS)	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
C4	C4 (CACTUS)	SWSM (Switch Module Under The Steering Wheel)	●	●	●	●	●
C4	C4 (CACTUS)	TCM (Automatic Gearbox)	●	●	●	●	●
C4	C4 (CACTUS)	TRU (Trailer Relay Unit)	●	●	●	●	●
C4	C4 (CACTUS)	TS (Touch Screen)	●	●	●	●	●
C4	C4 (CACTUS)	VRD (Voltage Retaining Device)	●	●	●	●	●
C4	C4 (L) (B7)	ABS (Anti-lock brake System)	●	●	●	●	●
C4	C4 (L) (B7)	AC (Air Conditioning)	●	●	●	●	●
C4	C4 (L) (B7)	ALM (Anti-theft Alarm)	●	●	●	●	●
C4	C4 (L) (B7)	AMP (Audio Amplifier)	●	●	●	●	●
C4	C4 (L) (B7)	BATT (Battery Charge Status Unit)	●	●	●	●	●
C4	C4 (L) (B7)	BSI (Built-in Systems Interface)	●	●	●	●	●
C4	C4 (L) (B7)	BSM (Monitoring Of The Blind Spot)	●	●	●	●	●
C4	C4 (L) (B7)	DDM (Driver's Door Module)	●	●	●	●	●
C4	C4 (L) (B7)	DHL (Directional Headlamps)	●	●	●	●	●
C4	C4 (L) (B7)	DSM (Driver's School Module)	●	●	●	●	●
C4	C4 (L) (B7)	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
C4	C4 (L) (B7)	Display/Telematics	●	●	●	●	●
C4	C4 (L) (B7)	ECM (Engine Control Module)	●	●	●	●	●
C4	C4 (L) (B7)	EPB (Electric Secondary Brake)	●	●	●	●	●
C4	C4 (L) (B7)	EPS (Electric Power Steering Electric Pump Unit)	●	●	●	●	●
C4	C4 (L) (B7)	ERU (Enging Relay Unit)	●	●	●	●	●
C4	C4 (L) (B7)	ESL (Electric Steering Lock)	●	●	●	●	●
C4	C4 (L) (B7)	IP (Instrument Cluster Panel)	●	●	●	●	●
C4	C4 (L) (B7)	KEY (Electronic Key Reader)	●	●	●	●	●
C4	C4 (L) (B7)	LDWS (Lane Departure Warning System)	●	●	●	●	●
C4	C4 (L) (B7)	List_VEH_C4_SEDAN_	●	●	●	●	●
C4	C4 (L) (B7)	MAAP (Multiplexed Additive Adding Pump)	●	●	●	●	●
C4	C4 (L) (B7)	MCP (Multiplexed Control Panel)	●	●	●	●	●
C4	C4 (L) (B7)	MSI (Matrix Screen Integral To The Instrument Panel)	●	●	●	●	●
C4	C4 (L) (B7)	MULD (Multifunction Display)	●	●	●	●	●
C4	C4 (L) (B7)	PAM (Parking Assistance)	●	●	●	●	●
C4	C4 (L) (B7)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C4	C4 (L) (B7)	Radio	●	●	●	●	●
C4	C4 (L) (B7)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●	●
C4	C4 (L) (B7)	SM (Services Module)	●	●	●	●	●
C4	C4 (L) (B7)	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
C4	C4 (L) (B7)	SRS (Airbag)	●	●	●	●	●
C4	C4 (L) (B7)	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
C4	C4 (L) (B7)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C4	C4 (L) (B7)	TCM (Automatic Gearbox)	●	●	●	●	●
C4	C4 (L) (B7)	TRU (Trailer Relay Unit)	●	●	●	●	●
C4	C4 (L) (B7)	UID (Under Inflation Detection(Dsg))	●	●	●	●	●
C4	C4 (L) (B7)	VRD (Voltage Retaining Device)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	ABS (Anti-lock brake System)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	AC (Air Conditioning)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	ALM (Anti-theft Alarm)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	AMP (Audio Amplifier)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	BATT (Battery Charge Status Unit)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	BATT (Battery Charge Status Unit)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	BCM (Body Control Module)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	BSI (Built-in Systems Interface)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	CD (CD Player)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	CD (External CD Player)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	DAF (Diesel Additive Function)	●	●	●	●	●

C4	C4 (PICASSO) (2006 - 2013)	DDM (Driver's Door Module)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	DHL (Directional Headlamps)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	DSM (Driver's School Module)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	Display/Telematics	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	ECM (Engine Control Module)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	EPB (Electric Secondary Brake)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	EPS (Electric Power Steering)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	ERU (Engine Relay Unit)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	ESL (Electric Steering Lock)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	HFC (Hands Free Control Kit)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	HFC (Hands free Control Unit)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	HFR (High Frequency Receiver)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	IP (Instrument Cluster Panel)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	KEY (Electronic Key Reader)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	LDWS (Lane Departure Warning System)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	LPU (Lighting Pack Unit)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	MCP (Multiplexed Control Panel)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	MDAP (Multiplexed Diesel Additive Pump)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	MULC (Multifunction Camera Or Multifunction Video Camera)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	MULD (Multifunction Display)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	PAM (Parking Assistance)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	PDM (Passenger's Door Module)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	PVA (Panoramic Visual Assistance ECU)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	RCU (Rev Counter Unit)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	Radio	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	SB (LH Reversible Seat Belt Reel)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	SB (RH Reversible Seat Belt Reel)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	SFB (Signalling Fuse Box)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	SM (Services Module)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	SRS (Airbag)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	SSP (Pneumatic Suspension)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	Siren	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	TCM (Automatic Gearbox)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	TEU (Telematics Unit SMEG_PLUS)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	TRU (Trailer Relay Unit)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	UID (Under Inflation Detection(Dsg))	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	VDA (Vehicle Distance Assistance)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	VRD (Voltage Retaining Device)	●	●	●	●	●
C4	C4 (PICASSO) (2006 - 2013)	Wiper (Windscreen Wiper)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	ABS (Anti-lock brake System)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	AC (Air Conditioning)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	ALM (Anti-theft Alarm)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	AMP (Audio Amplifier)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	BATT (Battery Charge Status Unit)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	BCM (Body Control Module)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	BSI (Built-in Systems Interface)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	CD (External CD Player)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	DDM (Driver's Door Module)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	DHL (Directional Headlamps)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	ECM (Engine Control Module)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	EPS (Electric Power Steering)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	ERU (Engine Relay Unit)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	ESL (Electric Steering Lock)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	HFC (Hands free Control Unit)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	IP (Instrument Cluster Panel)	●	●	●	●	●

C4	C4 (PICASSO) (B78) (2013 - )	KEY (Electronic Key Reader)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	MCP (Multiplexed Control Panel)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	MDAP (Multiplexed Diesel Additive Pump)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	MULC (Multifunction Camera Or Multifunction Video Camera)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	PAM (Parking Assistance)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	PVA (Panoramic Visual Assistance ECU)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	SB (LH Reversible Seat Belt Reel)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	SB (RH Reversible Seat Belt Reel)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	SFB (Signalling Fuse Box)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	SM (Services Module)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	SRS (Airbag)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	Siren	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	TCM (Automatic Gearbox)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	TEU (Telematics Unit SMEG_PLUS)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	TRU (Trailer Relay Unit)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	VDA (Vehicle Distance Assistance)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	VRD (Voltage Retaining Device)	●	●	●	●	●
C4	C4 (PICASSO) (B78) (2013 - )	Wiper (Windscreen Wiper)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	ABS (Anti-lock brake System)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	AC (Air Conditioning)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	ALM (Anti-theft Alarm)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	AMP (Audio Amplifier)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	BATT (Battery Charge Status Unit)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	BSI (Built-in Systems Interface)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	CD (CD Player)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	DAF (Diesel Additive Function)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	DDM (Driver's Door Module)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	DHL (Directional Headlamps)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	DSM (Driver's School Module)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	Display/Telematics	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	ECM (Engine Control Module)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	EPB (Electric Secondary Brake)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	EPS (Electric Power Steering)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	ERU (Engine Relay Unit)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	HFC (Hands Free Control Kit)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	HFR (High Frequency Receiver)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	IP (Instrument Cluster Panel)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	LDWS (Lane Departure Warning System)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	LPU (Lighting Pack Unit)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	MDAP (Multiplexed Diesel Additive Pump)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	MULD (Multifunction Display)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	PAM (Parking Assistance)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	PDM (Passenger's Door Module)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	RCU (Rev Counter Unit)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	Radio	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	SM (Services Module)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	SRS (Airbag)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	SSP (Pneumatic Suspension)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	TCM (Automatic Gearbox)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	TRU (Trailer Relay Unit)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	UID (Under Inflation Detection(Dsg))	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	VRD (Voltage Retaining Device)	●	●	●	●	●
C4	C4 (SEDAN) (2006 - )	Wiper (Windscreen Wiper)	●	●	●	●	●
C5	C5 (2001 - 2004)	ABS (Anti-lock brake System TEVES MK60)	●	●	●	●	●

C5	C5 (2001 - 2004)	ABS (Anti-lock brake System)	●	●	●	●	●
C5	C5 (2001 - 2004)	AC (Air Conditioning)	●	●	●	●	●
C5	C5 (2001 - 2004)	ADDG02	●	●	●	●	●
C5	C5 (2001 - 2004)	ADDG03	●	●	●	●	●
C5	C5 (2001 - 2004)	AH (Additional Heating)	●	●	●	●	●
C5	C5 (2001 - 2004)	ALM (Anti-theft Alarm)	●	●	●	●	●
C5	C5 (2001 - 2004)	AMP (Audio Amplifier)	●	●	●	●	●
C5	C5 (2001 - 2004)	ASM (Anti-slip Mode Selector)	●	●	●	●	●
C5	C5 (2001 - 2004)	Alarm	●	●	●	●	●
C5	C5 (2001 - 2004)	BATT (Battery Change Status Unit)	●	●	●	●	●
C5	C5 (2001 - 2004)	BATT (Battery Charge Status Unit)	●	●	●	●	●
C5	C5 (2001 - 2004)	BCM (Body Control Module)	●	●	●	●	●
C5	C5 (2001 - 2004)	BHU (Body Height Unit)	●	●	●	●	●
C5	C5 (2001 - 2004)	BSI (Built-in Systems Interface)	●	●	●	●	●
C5	C5 (2001 - 2004)	CD (CD Player)	●	●	●	●	●
C5	C5 (2001 - 2004)	DDC (Driver's Door Control Panel)	●	●	●	●	●
C5	C5 (2001 - 2004)	DHL (Directional Headlamps)	●	●	●	●	●
C5	C5 (2001 - 2004)	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
C5	C5 (2001 - 2004)	Display/Telematics	●	●	●	●	●
C5	C5 (2001 - 2004)	ECM (Engine Control Module)	●	●	●	●	●
C5	C5 (2001 - 2004)	EPB (Electric Secondary Brake)	●	●	●	●	●
C5	C5 (2001 - 2004)	EPS (Electric Power Steering)	●	●	●	●	●
C5	C5 (2001 - 2004)	ERU (Engine Relay Unit)	●	●	●	●	●
C5	C5 (2001 - 2004)	ESL (Electric Steering Lock)	●	●	●	●	●
C5	C5 (2001 - 2004)	ESP (Electronic Stability Program)	●	●	●	●	●
C5	C5 (2001 - 2004)	HFC (Hands Free Control Kit)	●	●	●	●	●
C5	C5 (2001 - 2004)	HFR (High Frequency Receiver)	●	●	●	●	●
C5	C5 (2001 - 2004)	IP (Instrument Cluster Panel)	●	●	●	●	●
C5	C5 (2001 - 2004)	LDWS (Lane Departure Warning System)	●	●	●	●	●
C5	C5 (2001 - 2004)	MCP (Multiplexed Control Panel)	●	●	●	●	●
C5	C5 (2001 - 2004)	MDP CONDUCT	●	●	●	●	●
C5	C5 (2001 - 2004)	MDP PASSAG	●	●	●	●	●
C5	C5 (2001 - 2004)	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
C5	C5 (2001 - 2004)	MULD (Multifunction Display SAGEM A)	●	●	●	●	●
C5	C5 (2001 - 2004)	MULD (Multifunction Display SAGEM C)	●	●	●	●	●
C5	C5 (2001 - 2004)	MULD (Multifunction Display)	●	●	●	●	●
C5	C5 (2001 - 2004)	PAM (Parking Assistance)	●	●	●	●	●
C5	C5 (2001 - 2004)	PVA (Panoramic Visual Assistance ECU)	●	●	●	●	●
C5	C5 (2001 - 2004)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C5	C5 (2001 - 2004)	RLS (Rain And Light Sensor)	●	●	●	●	●
C5	C5 (2001 - 2004)	RTTC (Radio Telephone Transceiver Control)	●	●	●	●	●
C5	C5 (2001 - 2004)	Radio	●	●	●	●	●
C5	C5 (2001 - 2004)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●	●
C5	C5 (2001 - 2004)	SB (Seat Belts Reminder LED)	●	●	●	●	●
C5	C5 (2001 - 2004)	SM (Services Module)	●	●	●	●	●
C5	C5 (2001 - 2004)	SRS (Airbag)	●	●	●	●	●
C5	C5 (2001 - 2004)	SRS (Siemens Central Airbag)	●	●	●	●	●
C5	C5 (2001 - 2004)	SSP (Active Damper Electronic Unit)	●	●	●	●	●
C5	C5 (2001 - 2004)	SSP (Ecotech Suspension)	●	●	●	●	●
C5	C5 (2001 - 2004)	SSP (Suspension Control System)	●	●	●	●	●
C5	C5 (2001 - 2004)	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
C5	C5 (2001 - 2004)	SWSM(Switch Module At The Steering Wheel)	●	●	●	●	●
C5	C5 (2001 - 2004)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C5	C5 (2001 - 2004)	TCM (Automatic Gearbox AL4)	●	●	●	●	●
C5	C5 (2001 - 2004)	TCM (Automatic Gearbox)	●	●	●	●	●
C5	C5 (2001 - 2004)	TEU (Telematics Unit RT4)	●	●	●	●	●
C5	C5 (2001 - 2004)	TRU (Trailer Relay Unit)	●	●	●	●	●
C5	C5 (2001 - 2004)	UID (Under Inflation Detection(Dsg))	●	●	●	●	●
C5	C5 (2001 - 2004)	UID (Under Inflation Detection)	●	●	●	●	●
C5	C5 (2001 - 2004)	VDA (Vehicle Distance Assistance)	●	●	●	●	●
C5	C5 (2001 - 2004)	VRD (Voltage Retaining Device)	●	●	●	●	●
C5	C5 (2001 - 2004)	Wiper (Windscreen Wiper)	●	●	●	●	●



C5	C5 (3rd Generation)	ABS (Anti-lock brake System)	●	●	●	●	●
C5	C5 (3rd Generation)	AC (Air Conditioning)	●	●	●	●	●
C5	C5 (3rd Generation)	AMP (Audio Amplifier)	●	●	●	●	●
C5	C5 (3rd Generation)	BATT (Battery Charge Status Unit)	●	●	●	●	●
C5	C5 (3rd Generation)	BSI (Built-in Systems Interface)	●	●	●	●	●
C5	C5 (3rd Generation)	DDC (Driver's Door Control Panel)	●	●	●	●	●
C5	C5 (3rd Generation)	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
C5	C5 (3rd Generation)	ECM (Engine Control Module)	●	●	●	●	●
C5	C5 (3rd Generation)	EPS (Electric Power Steering)	●	●	●	●	●
C5	C5 (3rd Generation)	ESL (Electric Steering Lock)	●	●	●	●	●
C5	C5 (3rd Generation)	IP (Instrument Cluster Panel)	●	●	●	●	●
C5	C5 (3rd Generation)	MCP (Multiplexed Control Panel)	●	●	●	●	●
C5	C5 (3rd Generation)	PAM (Parking Assistance)	●	●	●	●	●
C5	C5 (3rd Generation)	PVA (Panoramic Visual Assistance ECU)	●	●	●	●	●
C5	C5 (3rd Generation)	RLS (Rain And Light Sensor)	●	●	●	●	●
C5	C5 (3rd Generation)	RTTC (Radio Telephone Transceiver Control)	●	●	●	●	●
C5	C5 (3rd Generation)	SM (Services Module)	●	●	●	●	●
C5	C5 (3rd Generation)	SRS (Airbag)	●	●	●	●	●
C5	C5 (3rd Generation)	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
C5	C5 (3rd Generation)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C5	C5 (3rd Generation)	TCM (Automatic Gearbox)	●	●	●	●	●
C5	C5 (3rd Generation)	UID (Under Inflation Detection)	●	●	●	●	●
C5	C5 (3rd Generation)	VRD (Voltage Retaining Device)	●	●	●	●	●
C5	C5 (3rd Generation)	Wiper (Windscreen Wiper)	●	●	●	●	●
C5	C5 (AIRCROSS)	ABS (Anti-lock brake System)	●	●	●	●	●
C5	C5 (AIRCROSS)	AC (Air Conditioning)	●	●	●	●	●
C5	C5 (AIRCROSS)	ASM (Anti-slip Mode Selector)	●	●	●	●	●
C5	C5 (AIRCROSS)	BATT (Battery Charge Status Unit)	●	●	●	●	●
C5	C5 (AIRCROSS)	BCM (Body Control Module)	●	●	●	●	●
C5	C5 (AIRCROSS)	BSI (Built-in Systems Interface)	●	●	●	●	●
C5	C5 (AIRCROSS)	DDC (Driver's Door Control Panel)	●	●	●	●	●
C5	C5 (AIRCROSS)	DHL (Directional Headlamps)	●	●	●	●	●
C5	C5 (AIRCROSS)	ECM (Engine Control Module)	●	●	●	●	●
C5	C5 (AIRCROSS)	EPS (Electric Power Steering)	●	●	●	●	●
C5	C5 (AIRCROSS)	ESL (Electric Steering Lock)	●	●	●	●	●
C5	C5 (AIRCROSS)	IP (Instrument Cluster Panel)	●	●	●	●	●
C5	C5 (AIRCROSS)	MCP (Multiplexed Control Panel)	●	●	●	●	●
C5	C5 (AIRCROSS)	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
C5	C5 (AIRCROSS)	PAM (Parking Assistance)	●	●	●	●	●
C5	C5 (AIRCROSS)	PVA (Panoramic Visual Assistance ECU)	●	●	●	●	●
C5	C5 (AIRCROSS)	RLS (Rain And Light Sensor)	●	●	●	●	●
C5	C5 (AIRCROSS)	RTTC (Radio Telephone Transceiver Control)	●	●	●	●	●
C5	C5 (AIRCROSS)	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●	●
C5	C5 (AIRCROSS)	SM (Services Module)	●	●	●	●	●
C5	C5 (AIRCROSS)	SRS (Airbag)	●	●	●	●	●
C5	C5 (AIRCROSS)	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
C5	C5 (AIRCROSS)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C5	C5 (AIRCROSS)	TCM (Automatic Gearbox)	●	●	●	●	●
C5	C5 (AIRCROSS)	VDA (Vehicle Distance Assistance)	●	●	●	●	●
C5	C5 (AIRCROSS)	VRD (Voltage Retaining Device)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	AC (Air Conditioning)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	ADDG03	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	Alarm	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	BSI (Built-in Systems Interface)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	CD (CD Player)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	DHL (Directional Headlamps)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	ECM (Engine Control Module)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	EPS (Electric Power Steering)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	ERU (Engine Relay Unit)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	ESP (Electronic Stability Program)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	HFC (Hands Free Control Kit)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	IP (Instrument Cluster Panel)	●	●	●	●	●

C5	C5 (R) (2004 - 2007)	MDP CONDUCT	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	MDP PASSAG	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	MULD (Multifunction Display SAGEM C)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	PAM (Parking Assistance)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	Radio	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	SRS (Siemens Central Airbag)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	SSP (Ecotech Suspension)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	SWSM (Switch Module At The Steering Wheel)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	TCM (Automatic Gearbox)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	TEU (Telematics Unit RT4)	●	●	●	●	●
C5	C5 (R) (2004 - 2007)	UID (Under Inflation Detection(Dsg))	●	●	●	●	●
C5	C5 (X7) (2007 - )	ABS (Anti-lock brake System)	●	●	●	●	●
C5	C5 (X7) (2007 - )	AC (Air Conditioning)	●	●	●	●	●
C5	C5 (X7) (2007 - )	AH (Additional Heating)	●	●	●	●	●
C5	C5 (X7) (2007 - )	ALM (Anti-theft Alarm)	●	●	●	●	●
C5	C5 (X7) (2007 - )	AMP (Audio Amplifier)	●	●	●	●	●
C5	C5 (X7) (2007 - )	BATT (Battery Change Status Unit)	●	●	●	●	●
C5	C5 (X7) (2007 - )	BCM (Body Control Module)	●	●	●	●	●
C5	C5 (X7) (2007 - )	BHU (Body Height Unit)	●	●	●	●	●
C5	C5 (X7) (2007 - )	BSI (Built-in Systems Interface)	●	●	●	●	●
C5	C5 (X7) (2007 - )	CD (CD Player)	●	●	●	●	●
C5	C5 (X7) (2007 - )	DDM (Driver's Door Module)	●	●	●	●	●
C5	C5 (X7) (2007 - )	DHL (Directional Headlamps)	●	●	●	●	●
C5	C5 (X7) (2007 - )	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
C5	C5 (X7) (2007 - )	Display/Telematics	●	●	●	●	●
C5	C5 (X7) (2007 - )	ECM (Engine Control Module)	●	●	●	●	●
C5	C5 (X7) (2007 - )	EPB (Electric Secondary Brake)	●	●	●	●	●
C5	C5 (X7) (2007 - )	EPS (Electric Power Steering)	●	●	●	●	●
C5	C5 (X7) (2007 - )	ERU (Engine Relay Unit)	●	●	●	●	●
C5	C5 (X7) (2007 - )	HFC (Hands Free Control Kit)	●	●	●	●	●
C5	C5 (X7) (2007 - )	HFR (High Frequency Receiver)	●	●	●	●	●
C5	C5 (X7) (2007 - )	IP (Instrument Cluster Panel)	●	●	●	●	●
C5	C5 (X7) (2007 - )	LDWS (Lane Departure Warning System)	●	●	●	●	●
C5	C5 (X7) (2007 - )	MULD (Multifunction Display)	●	●	●	●	●
C5	C5 (X7) (2007 - )	PAM (Parking Assistance)	●	●	●	●	●
C5	C5 (X7) (2007 - )	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C5	C5 (X7) (2007 - )	Radio	●	●	●	●	●
C5	C5 (X7) (2007 - )	SB (Seat Belts Reminder LED)	●	●	●	●	●
C5	C5 (X7) (2007 - )	SM (Services Module)	●	●	●	●	●
C5	C5 (X7) (2007 - )	SRS (Airbag)	●	●	●	●	●
C5	C5 (X7) (2007 - )	SSP (Active Damper Electronic Unit)	●	●	●	●	●
C5	C5 (X7) (2007 - )	SSP (Suspension Control System)	●	●	●	●	●
C5	C5 (X7) (2007 - )	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C5	C5 (X7) (2007 - )	TCM (Automatic Gearbox)	●	●	●	●	●
C5	C5 (X7) (2007 - )	TRU (Trailer Relay Unit)	●	●	●	●	●
C5	C5 (X7) (2007 - )	UID (Under Inflation Detection(Dsg))	●	●	●	●	●
C5	C5 (X7) (2007 - )	VRD (Voltage Retaining Device)	●	●	●	●	●
C5	C5 (X7) (2007 - )	Wiper (Windscreen Wiper)	●	●	●	●	●
C6	C6	ABS (Anti-lock brake System)	●	●	●	●	●
C6	C6	AC (Air Conditioning)	●	●	●	●	●
C6	C6	AC (Rear Air Conditioning Panel)	●	●	●	●	●
C6	C6	AH (Additional Heating)	●	●	●	●	●
C6	C6	ALM (Anti-theft Alarm)	●	●	●	●	●
C6	C6	AMP (Audio Amplifier)	●	●	●	●	●
C6	C6	BATT (Battery Change Status Unit)	●	●	●	●	●
C6	C6	BATT (Battery Charge Status Unit)	●	●	●	●	●
C6	C6	BRU (Boot Relay Unit)	●	●	●	●	●
C6	C6	BSI (Built-in Systems Interface)	●	●	●	●	●
C6	C6	CD (CD Player)	●	●	●	●	●
C6	C6	DDC (Driver's Door Control Panel)	●	●	●	●	●
C6	C6	DDM (Driver's Door Module)	●	●	●	●	●

C6	C6	DHL (Directional Headlamps)	●	●	●	●	●
C6	C6	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
C6	C6	Display/Telematics	●	●	●	●	●
C6	C6	ECM (Engine Control Module)	●	●	●	●	●
C6	C6	EPB (Electric Secondary Brake)	●	●	●	●	●
C6	C6	EPS (Electric Power Steering)	●	●	●	●	●
C6	C6	ERU (Engine Relay Unit)	●	●	●	●	●
C6	C6	ESL (Electric Steering Lock)	●	●	●	●	●
C6	C6	HFC (Hands Free Control Kit)	●	●	●	●	●
C6	C6	HFR (High Frequency Receiver)	●	●	●	●	●
C6	C6	HHV (High Head Vision)	●	●	●	●	●
C6	C6	HLL (Left Hand Headlamp)	●	●	●	●	●
C6	C6	HLR (Right Hand Headlamp)	●	●	●	●	●
C6	C6	IP (Instrument Cluster Panel)	●	●	●	●	●
C6	C6	LDWS (Lane Departure Warning System)	●	●	●	●	●
C6	C6	MCP (Multiplexed Control Panel)	●	●	●	●	●
C6	C6	MPD (Moving Panel Deflector)	●	●	●	●	●
C6	C6	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
C6	C6	MULD (Multifunction Display)	●	●	●	●	●
C6	C6	PAM (Parking Assistance)	●	●	●	●	●
C6	C6	PDM (Passenger's Door Module)	●	●	●	●	●
C6	C6	PID (Pedestrian Impact Detection)	●	●	●	●	●
C6	C6	PSM (Passenger's Seat Memorisation Unit)	●	●	●	●	●
C6	C6	PVA (Panoramic Visual Assistance ECU)	●	●	●	●	●
C6	C6	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C6	C6	RLS (Rain And Light Sensor)	●	●	●	●	●
C6	C6	RSM (Rear Seat Memorising Unit)	●	●	●	●	●
C6	C6	RTTC (Radio Telephone Transceiver Control)	●	●	●	●	●
C6	C6	Radio	●	●	●	●	●
C6	C6	SM (Services Module)	●	●	●	●	●
C6	C6	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
C6	C6	SRS (Airbag)	●	●	●	●	●
C6	C6	SSLH (LH Seat Switch Panel)	●	●	●	●	●
C6	C6	SSP (Suspension Control System)	●	●	●	●	●
C6	C6	SSRH (RH Seat Switch Panel)	●	●	●	●	●
C6	C6	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
C6	C6	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C6	C6	TCM (Automatic Gearbox)	●	●	●	●	●
C6	C6	TRU (Trailer Relay Unit)	●	●	●	●	●
C6	C6	UID (Under Inflation Detection(Dsg))	●	●	●	●	●
C6	C6	VDA (Vehicle Distance Assistance)	●	●	●	●	●
C6	C6	VRD (Voltage Retaining Device)	●	●	●	●	●
C6	C6	Wiper (Windscreen Wiper)	●	●	●	●	●
C6	C6 (CHINA)	ABS (Anti-lock brake System)	●	●	●	●	●
C6	C6 (CHINA)	AC (Air Conditioning)	●	●	●	●	●
C6	C6 (CHINA)	AMP (Audio Amplifier)	●	●	●	●	●
C6	C6 (CHINA)	BATT (Battery Charge Status Unit)	●	●	●	●	●
C6	C6 (CHINA)	BSI (Built-in Systems Interface)	●	●	●	●	●
C6	C6 (CHINA)	DDC (Driver's Door Control Panel)	●	●	●	●	●
C6	C6 (CHINA)	ECM (Engine Control Module)	●	●	●	●	●
C6	C6 (CHINA)	EPS (Electric Power Steering)	●	●	●	●	●
C6	C6 (CHINA)	ERU (Engine Relay Unit)	●	●	●	●	●
C6	C6 (CHINA)	ESL (Electric Steering Lock)	●	●	●	●	●
C6	C6 (CHINA)	IP (Instrument Cluster Panel)	●	●	●	●	●
C6	C6 (CHINA)	MCP (Multiplexed Control Panel)	●	●	●	●	●
C6	C6 (CHINA)	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
C6	C6 (CHINA)	PAM (Parking Assistance)	●	●	●	●	●
C6	C6 (CHINA)	PVA (Panoramic Visual Assistance ECU)	●	●	●	●	●
C6	C6 (CHINA)	RLS (Rain And Light Sensor)	●	●	●	●	●
C6	C6 (CHINA)	RTTC (Radio Telephone Transceiver Control)	●	●	●	●	●
C6	C6 (CHINA)	SM (Services Module)	●	●	●	●	●
C6	C6 (CHINA)	SPMU (Supply Protection And Management Unit)	●	●	●	●	●

C6	C6 (CHINA)	SRS (Airbag)	●	●	●	●	●
C6	C6 (CHINA)	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
C6	C6 (CHINA)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C6	C6 (CHINA)	TCM (Automatic Gearbox)	●	●	●	●	●
C6	C6 (CHINA)	VDA (Vehicle Distance Assistance)	●	●	●	●	●
C6	C6 (CHINA)	VRD (Voltage Retaining Device)	●	●	●	●	●
C6	C6 (CHINA)	Wiper (Windscreen Wiper)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	ABS (Anti-lock brake System)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	AC (Air Conditioning)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	AH (Additional Heating)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	ALM (Anti-theft Alarm)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	BSI (Built-in Systems Interface)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	CD (CD Player)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	DAF (Diesel Additive Function)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	DDM (Driver's Door Module)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	DSMU (Driver's Seat Memory Unit)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	Display/Telematics	●	●	●	●	●
C8	C8 (CAN) (2005 - )	ECM (Engine Control Module)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	EPS (Electric Power Steering)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	ERU (Engine Relay Unit)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	HFC (Hands Free Control Kit)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	HLL (Left Hand Headlamp)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	HLR (Right Hand Headlamp)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	IP (Instrument Cluster Panel)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	IP (Leds And Odometer ECU)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	MULD (Colour Multifunction Display)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	MULD (Multifunction Display)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	PAM (Parking Assistance)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	PDM (Passenger's Door Module)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	RBS (Rain And Brightness Sensor)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	Radio	●	●	●	●	●
C8	C8 (CAN) (2005 - )	SR-F (Front Sunroof)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	SR-M (Middle Sunroof)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	SR-R (Rear Sunroof)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	SRS (Airbag)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	SSDM (Sliding Side Doors Module)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
C8	C8 (CAN) (2005 - )	TCM (Automatic Gearbox)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	TEU (Telematics Receiver Command)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	TRU (Trailer Relay Unit)	●	●	●	●	●
C8	C8 (CAN) (2005 - )	UID (Under Inflation Detection(Dsg))	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	AC (Air Conditioning)	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	ADDG02	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	AH (Additional Heating)	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	BSI (Built-in Systems Interface)	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	CD (CD Player)	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	ECM (Engine Control Module)	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	ESP (Electronic Stability Program BOSCH 5.7)	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	IP (Instrument Cluster Panel)	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	MDP CONDUCT	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	MDP PASSAG	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	MULD (Multifunction Display SAGEM B)	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	PAM (Parking Assistance)	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	RPE (Radio Post-equipment)	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	SRS (Airbag 5.7)	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	SRS (Airbag)	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	SWSM (Switch Module At The Steering Wheel)	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	TCM (Automatic Gearbox)	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	TEU (Telematics Receiver Command)	●	●	●	●	●
C8	C8 (VAN) (2002 - 2005)	TEU (Telematics Unit)	●	●	●	●	●
FUKANG	FUKANG	ABS (Anti-lock brake System BOSCH 8.1)	●	●	●	●	●
FUKANG	FUKANG	ECM (1.4L KFX BOSCH MP5.2)	●	●	●	●	●

FUKANG	FUKANG	ECM (1.6L KFA/HFX/N6A/NFS/NFU - ME744)	●	●	●	●	●
FUKANG	FUKANG	ECM (1.6L NFZ BOSCH MP5.2)	●	●	●	●	●
FUKANG	FUKANG	KEY (Electronic Key Reader)	●	●	●	●	●
FUKANG	FUKANG	SRS (Airbag 5.3)	●	●	●	●	●
FUKANG	FUKANG	TCM (Automatic Gearbox AL4 TA2000)	●	●	●	●	●
FUKANG	FUKANG	TCM (Automatic Gearbox AL4 TA96)	●	●	●	●	●
FUKANG	FUKANG (988)	ABS (Anti-lock brake System BOSCH 8.1)	●	●	●	●	●
FUKANG	FUKANG (988)	ECM (1.4L KFX BOSCH MP5.2)	●	●	●	●	●
FUKANG	FUKANG (988)	ECM (1.6L KFA/HFX/N6A/NFS/NFU - ME744)	●	●	●	●	●
FUKANG	FUKANG (988)	ECM (1.6L NFZ BOSCH MP5.2)	●	●	●	●	●
FUKANG	FUKANG (988)	KEY (Electronic Key Reader)	●	●	●	●	●
FUKANG	FUKANG (988)	SRS (Airbag 5.3)	●	●	●	●	●
FUKANG	FUKANG (988)	TCM (Automatic Gearbox AL4 TA2000)	●	●	●	●	●
FUKANG	FUKANG (988)	TCM (Automatic Gearbox AL4 TA96)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	ABS (Anti-lock brake System)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	AC (Air Conditioning)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	AH (Additional Heating)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	BSI (Built-in Systems Interface)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	ECM (Engine Control Module)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	EPS (Electric Power Steering)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	IP (Instrument Cluster Panel)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	LDWS (Lane Departure Warning System)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	PAM (Parking Assistance)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	SRS (Airbag)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	SSP (Pneumatic Suspension)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	TEU/NAVI (Telematics Unit(Rtx) Or Audio-navigation)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	TG (Tachograph)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 - )	ABS (Anti-lock brake System)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 - )	AC (Air Conditioning)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 - )	AH (Additional Heating)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 - )	BSI (Built-in Systems Interface)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 - )	ECM (Engine Control Module)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 - )	EPS (Electric Power Steering)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 - )	IP (Instrument Cluster Panel)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 - )	LDWS (Lane Departure Warning System)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 - )	PAM (Parking Assistance)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 - )	SRS (Airbag)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 - )	ABS (Anti-lock brake System)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 - )	AC (Air Conditioning)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 - )	AH (Additional Heating)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 - )	BSI (Built-in Systems Interface)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 - )	ECM (Engine Control Module)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 - )	EPS (Electric Power Steering)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 - )	IP (Instrument Cluster Panel)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 - )	PAM (Parking Assistance)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 - )	SRS (Airbag)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 - )	SSP (Pneumatic Suspension)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 - )	TEU/NAVI (Telematics Unit(Rtx) Or Audio-navigation)	●	●	●	●	●
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 - )	TG (Tachograph)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	AH (Additional Heating)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	CPH_TEXTON	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	ECM (1.9L DHX BOSCH AS3-VP20)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	ECM (1.9L WJY LUCAS DCN2)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	ECM (2.0L RHW BOSCH EDC15C2)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	ECM (2.0L RHX BOSCH EDC15C2)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	ECM (2.0L RHZ BOSCH EDC15C2)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	SRS (Airbag 5.3)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	SRS (Airbag)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	TCM (Automatic Gearbox AL4)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	AH (Additional Heating)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	CPH_TEXTON	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (1.9L WJY LUCAS DCN2)	●	●	●	●	●

JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2.0L RFN MM48P)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2.0L RHW BOSCH EDC15C2)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2.0L RHX BOSCH EDC15C2)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2.0L RHZ BOSCH EDC15C2)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	SRS (Airbag 5.3)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	SRS (Airbag)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	TCM (Automatic Gearbox AL4)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ABS (Anti-lock brake System)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	AC (Air Conditioning)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	AC (Rear Air Conditioning Panel)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	AH (Additional Heating)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ALM (Anti-theft Alarm)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ASM (Anti-slip Mode Selector)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	BATT (Battery Change Status Unit)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	BSI (Built-in Systems Interface)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	BWCU (Bodywork Conversion Unit)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	CD (CD Player)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	Display/Telematics	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ECM (Engine Control Module)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	EPS (Electric Power Steering)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ERU (Engine Relay Unit)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	HFC (Hands Free Control Kit)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	HFR (High Frequency Receiver)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	IP (Instrument Cluster Panel)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	MULD (Multifunction Display)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	PAM (Parking Assistance)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	Radio	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	SRS (Airbag)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	SSP (Pneumatic Suspension)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	TCM (Automatic Gearbox)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	TRU (Trailer Relay Unit)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	UID (Under Inflation Detection(Dsg))	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	ABS (Anti-lock brake System)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	AC (Air Conditioning)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	AH (Additional Heating)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	ALM (Anti-theft Alarm)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	ASM (Anti-slip Mode Selector)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	BATT (Battery Change Status Unit)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	BSI (Built-in Systems Interface)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	ECM (Engine Control Module)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	ERU (Engine Relay Unit)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	ESL (Electric Steering Lock)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	HHV (High Head Vision)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	IP (Instrument Cluster Panel)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	MCP (Multiplexed Control Panel)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	MULD (Multifunction Display)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	PAM (Parking Assistance)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	RLS (Rain And Light Sensor)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	RTTC (Radio Telephone Transceiver Control)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	SB (Seat Belts Not Fastened LED Unit)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	SM (Services Module)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	SPMU (Supply Protection And Management Unit)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	SRS (Airbag)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	Siren	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	TCM (Automatic Gearbox)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	TRU (Trailer Relay Unit)	●	●	●	●	●
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	VDA (Vehicle Distance Assistance)	●	●	●	●	●

JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 - )	VRD (Voltage Retaining Device)	●	●	●	●	●
NEMO		ABS (Anti-lock brake System)	●	●	●	●	●
NEMO		BSI (Built-in Systems Interface)	●	●	●	●	●
NEMO		ECM (Engine Control Module)	●	●	●	●	●
NEMO		IP (Instrument Cluster Panel)	●	●	●	●	●
NEMO		PAM (Parking Assistance)	●	●	●	●	●
NEMO		SRS (Airbag)	●	●	●	●	●
NEMO		TCM (Automatic Gearbox)	●	●	●	●	●
SAXO		ABS (Anti-lock brake System BOSCH 5.3)	●	●	●	●	●
SAXO		ABS (Anti-lock brake System BOSCH 8.1)	●	●	●	●	●
SAXO		ECM (1.0L CDY/CDZ BOSCH MA3.1)	●	●	●	●	●
SAXO		ECM (1.4L KFW SAGEM S2000)	●	●	●	●	●
SAXO		ECM (1.4L KFX BOSCH MP7.3)	●	●	●	●	●
SAXO		ECM (1.4L KFX MM1AP)	●	●	●	●	●
SAXO		ECM (1.6L NFX MM1AP)	●	●	●	●	●
SAXO		ECM (1.6L NFX MM48P)	●	●	●	●	●
SAXO		ECM (1.6L NFZ BOSCH MP5.1)	●	●	●	●	●
SAXO		ECM (1.6L NFZ BOSCH MP5.2)	●	●	●	●	●
SAXO		ECM (1.6L NFZ BOSCH MP7.2)	●	●	●	●	●
SAXO		ECM (HFX/NFT/NFV - M744)	●	●	●	●	●
SAXO		KEY (Electronic Key Reader)	●	●	●	●	●
SAXO		SRS (Central Airbag)	●	●	●	●	●
SAXO		TCM (Automatic Gearbox)	●	●	●	●	●
SPACETOURER		ABS (Anti-lock brake System)	●	●	●	●	●
SPACETOURER		AC (Air Conditioning)	●	●	●	●	●
SPACETOURER		AH (Additional Heating)	●	●	●	●	●
SPACETOURER		ALM (Anti-theft Alarm)	●	●	●	●	●
SPACETOURER		ASM (Anti-slip Mode Selector)	●	●	●	●	●
SPACETOURER		BATT (Battery Change Status Unit)	●	●	●	●	●
SPACETOURER		BSI (Built-in Systems Interface)	●	●	●	●	●
SPACETOURER		ECM (Engine Control Module)	●	●	●	●	●
SPACETOURER		ERU (Engine Relay Unit)	●	●	●	●	●
SPACETOURER		ESL (Electric Steering Lock)	●	●	●	●	●
SPACETOURER		HHV (High Head Vision)	●	●	●	●	●
SPACETOURER		IP (Instrument Cluster Panel)	●	●	●	●	●
SPACETOURER		MCP (Multiplexed Control Panel)	●	●	●	●	●
SPACETOURER		MULC (Multifunction Video Camera (CMF))	●	●	●	●	●
SPACETOURER		MULD (Multifunction Display)	●	●	●	●	●
SPACETOURER		PAM (Parking Assistance)	●	●	●	●	●
SPACETOURER		RLS (Rain And Light Sensor)	●	●	●	●	●
SPACETOURER		RTTC (Radio Telephone Transceiver Control)	●	●	●	●	●
SPACETOURER		SB (Seat Belts Not Fastened LED Unit)	●	●	●	●	●
SPACETOURER		SM (Services Module)	●	●	●	●	●
SPACETOURER		SPMU (Supply Protection And Management Unit)	●	●	●	●	●
SPACETOURER		SRS (Airbag)	●	●	●	●	●
SPACETOURER		SWIC (Steering Wheel With Integral Controls (VCI))	●	●	●	●	●
SPACETOURER		SWSM(Switch Module Under The Steering Wheel(Top Of Column))	●	●	●	●	●
SPACETOURER		Siren	●	●	●	●	●
SPACETOURER		TCM (Automatic Gearbox)	●	●	●	●	●
SPACETOURER		TRU (Trailer Relay Unit)	●	●	●	●	●
SPACETOURER		VDA (Vehicle Distance Assistance)	●	●	●	●	●
SPACETOURER		VRD (Voltage Retaining Device)	●	●	●	●	●
SYNERGIE		ECM (1.9L DHX BOSCH AS3-VP20)	●	●	●	●	●
SYNERGIE		ECM (2.0L RFN MM48P)	●	●	●	●	●
SYNERGIE		ECM (2.0L RFV BOSCH MP7.3)	●	●	●	●	●
SYNERGIE		ECM (2.0L RGX BOSCH MP3.2)	●	●	●	●	●
SYNERGIE		ECM (2.0L RHW BOSCH EDC15C2)	●	●	●	●	●
SYNERGIE		ECM (2.0L RHZ BOSCH EDC15C2)	●	●	●	●	●
SYNERGIE		SRS (Airbag 5.3)	●	●	●	●	●
SYNERGIE		SRS (SAC CENT AUTOLIV)	●	●	●	●	●
SYNERGIE		TCM (Automatic Gearbox AL4)	●	●	●	●	●
XANTIA	XANTIA (1)	ECM (1.8L LFX MM1AP)	●	●	●	●	●

XANTIA	XANTIA (1)	ECM (1.8L LFY BOSCH MP5.1.1)	●	●	●	●	●
XANTIA	XANTIA (1)	ECM (1.8L LFY SAGEM SL96)	●	●	●	●	●
XANTIA	XANTIA (1)	ECM (1.9L DHX BOSCH AS3-VP20)	●	●	●	●	●
XANTIA	XANTIA (1)	ECM (2.0L R6E BOSCH MP5.2)	●	●	●	●	●
XANTIA	XANTIA (1)	ECM (2.0L RFT BOSCH MP3.2)	●	●	●	●	●
XANTIA	XANTIA (1)	ECM (2.0L RFV BOSCH MP5.1.1)	●	●	●	●	●
XANTIA	XANTIA (1)	ECM (2.0L RFV BOSCH MP5.2)	●	●	●	●	●
XANTIA	XANTIA (1)	ECM (2.0L RFY BOSCH MP3.2)	●	●	●	●	●
XANTIA	XANTIA (1)	ECM (2.0L RGX BOSCH MP3.2)	●	●	●	●	●
XANTIA	XANTIA (1)	ECM (2.1L P8C LUCAS EPIC)	●	●	●	●	●
XANTIA	XANTIA (1)	ECM (3.0L XFZ BOSCH MP7.0)	●	●	●	●	●
XANTIA	XANTIA (2)	CPH_TEXTON	●	●	●	●	●
XANTIA	XANTIA (2)	ECM (1.6L BFZ MM4.8P)	●	●	●	●	●
XANTIA	XANTIA (2)	ECM (1.8L LFX MM1AP)	●	●	●	●	●
XANTIA	XANTIA (2)	ECM (1.8L LFY BOSCH MP7.3)	●	●	●	●	●
XANTIA	XANTIA (2)	ECM (1.8L LFY SAGEM SL96)	●	●	●	●	●
XANTIA	XANTIA (2)	ECM (1.9L DHX BOSCH AS3-VP20)	●	●	●	●	●
XANTIA	XANTIA (2)	ECM (2.0L R6E BOSCH MP5.2)	●	●	●	●	●
XANTIA	XANTIA (2)	ECM (2.0L RFV BOSCH MP5.2)	●	●	●	●	●
XANTIA	XANTIA (2)	ECM (2.0L RGX BOSCH MP3.2)	●	●	●	●	●
XANTIA	XANTIA (2)	ECM (2.0L RHY BOSCH EDC15C2)	●	●	●	●	●
XANTIA	XANTIA (2)	ECM (2.0L RHZ BOSCH EDC15C2)	●	●	●	●	●
XANTIA	XANTIA (2)	ECM (2.1L P8C LUCAS EPIC)	●	●	●	●	●
XANTIA	XANTIA (2)	ECM (3.0L XFZ BOSCH MP7.0)	●	●	●	●	●
XANTIA	XANTIA (2)	SRS (Airbag)	●	●	●	●	●
XANTIA	XANTIA (2)	SRS (Left Airbag)	●	●	●	●	●
XANTIA	XANTIA (2)	SRS (Right Airbag)	●	●	●	●	●
XANTIA	XANTIA (2)	SRS (TEVES_MK20E)	●	●	●	●	●
XM	XM	ABS (Anti-lock brake System TEVES MK20E)	●	●	●	●	●
XM	XM	ECM (2.0L R6E BOSCH MP5.2)	●	●	●	●	●
XM	XM	ECM (2.0L RFV BOSCH MP5.1.1)	●	●	●	●	●
XM	XM	ECM (2.0L RFV BOSCH MP5.2)	●	●	●	●	●
XM	XM	ECM (2.0L RFZ BOSCH MP5.1)	●	●	●	●	●
XM	XM	ECM (2.0L RGX BOSCH MP3.2)	●	●	●	●	●
XM	XM	ECM (2.0L RGY BOSCH MP3.2)	●	●	●	●	●
XM	XM	ECM (2.5L THY BOSCH MSA11 7.6 VP36)	●	●	●	●	●
XM	XM	ECM (2.5L THY BOSCH MSA11 VP36)	●	●	●	●	●
XM	XM	ECM (3.0L XFZ BOSCH MP7.0)	●	●	●	●	●
XM	XM (Mux)	ABS (Anti-lock brake System TEVES MK20E)	●	●	●	●	●
XM	XM (Mux)	ECM (2.5L THY BOSCH MSA11 7.6 VP36)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	ABS (ABS Electronic Distribution)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	ABS (ABS Mechanical Distribution)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	AC (Air Conditioning)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	Alarm	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	BSI (Built-in Systems Interface)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	CD (CD Player)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	ECM (1.4L KFX BOSCH MP7.3)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	ECM (1.4L KFX SAGEM SL96)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	ECM (1.6L KFA/HFX/N6A/NFS/NFU - ME744)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	ECM (1.6L NFZ BOSCH MP5.2)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	ECM (1.6L NFZ BOSCH MP7.2)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	ECM (1.8L LFX MM1AP)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	ECM (1.8L LFY SAGEM SL96)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	ECM (1.9L DHV BOSCH AS3-VP20)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	ECM (2.0L RFS MM1AP)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	ECM (2.0L RFV BOSCH MP5.2)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	ECM (2.0L RHY BOSCH EDC15C2)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	IP (Instrument Cluster Panel)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	MULD (Multifunction Display SAGEM B)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	Radio	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	SRS (Airbag)	●	●	●	●	●
XSARA	XSARA (1) (1997 - 2000)	TCM (Automatic Gearbox AL4 TA96)	●	●	●	●	●



XSARA	XSARA (2) (2000 - 2006)	ABS (Anti-lock brake System BOSCH 5.3)	●	●	●	●	●
XSARA	XSARA (2) (2000 - 2006)	AC (Air Conditioning)	●	●	●	●	●
XSARA	XSARA (2) (2000 - 2006)	BSI (BSI_VAR_C)	●	●	●	●	●
XSARA	XSARA (2) (2000 - 2006)	CD (CD Player)	●	●	●	●	●
XSARA	XSARA (2) (2000 - 2006)	ECM (Engine Control Module)	●	●	●	●	●
XSARA	XSARA (2) (2000 - 2006)	ESP (Electronic Stability Program BOSCH 5.7)	●	●	●	●	●
XSARA	XSARA (2) (2000 - 2006)	IP (Instrument Cluster Panel)	●	●	●	●	●
XSARA	XSARA (2) (2000 - 2006)	MULD (Multifunction Display A)	●	●	●	●	●
XSARA	XSARA (2) (2000 - 2006)	PAM (Parking Assistance)	●	●	●	●	●
XSARA	XSARA (2) (2000 - 2006)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
XSARA	XSARA (2) (2000 - 2006)	Radio	●	●	●	●	●
XSARA	XSARA (2) (2000 - 2006)	SRS (Central Airbag)	●	●	●	●	●
XSARA	XSARA (2) (2000 - 2006)	SWSM (Switch Module At The Steering Wheel)	●	●	●	●	●
XSARA	XSARA (2) (2000 - 2006)	TCM (Automatic Gearbox)	●	●	●	●	●
XSARA	XSARA (PICASSO) (1999 - 2002)	ABS (Anti-lock brake System BOSCH 5.3)	●	●	●	●	●
XSARA	XSARA (PICASSO) (1999 - 2002)	ABS (Anti-lock brake System)	●	●	●	●	●
XSARA	XSARA (PICASSO) (1999 - 2002)	AC (Air Conditioning)	●	●	●	●	●
XSARA	XSARA (PICASSO) (1999 - 2002)	ADDG02	●	●	●	●	●
XSARA	XSARA (PICASSO) (1999 - 2002)	Alarm	●	●	●	●	●
XSARA	XSARA (PICASSO) (1999 - 2002)	BSI (Built-in Systems Interface)	●	●	●	●	●
XSARA	XSARA (PICASSO) (1999 - 2002)	CD (CD Player)	●	●	●	●	●
XSARA	XSARA (PICASSO) (1999 - 2002)	ECM (Engine Control Module)	●	●	●	●	●
XSARA	XSARA (PICASSO) (1999 - 2002)	IP (Instrument Cluster Panel)	●	●	●	●	●
XSARA	XSARA (PICASSO) (1999 - 2002)	MULD (Multifunction Display VDO B)	●	●	●	●	●
XSARA	XSARA (PICASSO) (1999 - 2002)	PAM (Parking Assistance)	●	●	●	●	●
XSARA	XSARA (PICASSO) (1999 - 2002)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
XSARA	XSARA (PICASSO) (1999 - 2002)	Radio	●	●	●	●	●
XSARA	XSARA (PICASSO) (1999 - 2002)	SRS (Central Airbag)	●	●	●	●	●
XSARA	XSARA (PICASSO) (1999 - 2002)	SWSM (Switch Module At The Steering Wheel)	●	●	●	●	●
XSARA	XSARA (PICASSO) (1999 - 2002)	TCM (Automatic Gearbox)	●	●	●	●	●
XSARA	XSARA (PICASSO) (2002 - 2006)	ABS (Anti-lock brake System BOSCH 5.3)	●	●	●	●	●
XSARA	XSARA (PICASSO) (2002 - 2006)	ABS (Anti-lock brake System)	●	●	●	●	●
XSARA	XSARA (PICASSO) (2002 - 2006)	AC (Air Conditioning)	●	●	●	●	●
XSARA	XSARA (PICASSO) (2002 - 2006)	ADDG02	●	●	●	●	●
XSARA	XSARA (PICASSO) (2002 - 2006)	Alarm	●	●	●	●	●
XSARA	XSARA (PICASSO) (2002 - 2006)	BSI (Built-in Systems Interface)	●	●	●	●	●
XSARA	XSARA (PICASSO) (2002 - 2006)	CD (CD Player)	●	●	●	●	●
XSARA	XSARA (PICASSO) (2002 - 2006)	ECM (Engine Control Module)	●	●	●	●	●
XSARA	XSARA (PICASSO) (2002 - 2006)	IP (Instrument Cluster Panel)	●	●	●	●	●
XSARA	XSARA (PICASSO) (2002 - 2006)	MULD (Multifunction Display VDO B)	●	●	●	●	●
XSARA	XSARA (PICASSO) (2002 - 2006)	PAM (Parking Assistance)	●	●	●	●	●
XSARA	XSARA (PICASSO) (2002 - 2006)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
XSARA	XSARA (PICASSO) (2002 - 2006)	Radio	●	●	●	●	●
XSARA	XSARA (PICASSO) (2002 - 2006)	SRS (Central Airbag)	●	●	●	●	●
XSARA	XSARA (PICASSO) (2002 - 2006)	SWSM (Switch Module At The Steering Wheel)	●	●	●	●	●
XSARA	XSARA (PICASSO) (2002 - 2006)	TCM (Automatic Gearbox)	●	●	●	●	●
XSARA	XSARA (PICASSO) (CHINA)	ABS (Anti-lock brake System)	●	●	●	●	●
XSARA	XSARA (PICASSO) (CHINA)	AC (Air Conditioning)	●	●	●	●	●
XSARA	XSARA (PICASSO) (CHINA)	ADDG02	●	●	●	●	●
XSARA	XSARA (PICASSO) (CHINA)	CD (CD Player)	●	●	●	●	●
XSARA	XSARA (PICASSO) (CHINA)	ECM (Engine Control Module)	●	●	●	●	●
XSARA	XSARA (PICASSO) (CHINA)	IP (Instrument Cluster Panel)	●	●	●	●	●
XSARA	XSARA (PICASSO) (CHINA)	MULD (Multifunction Display SAGEM B)	●	●	●	●	●
XSARA	XSARA (PICASSO) (CHINA)	PAM (Parking Assistance)	●	●	●	●	●
XSARA	XSARA (PICASSO) (CHINA)	RBS (Rain And Brightness Sensor)	●	●	●	●	●
XSARA	XSARA (PICASSO) (CHINA)	Radio	●	●	●	●	●
XSARA	XSARA (PICASSO) (CHINA)	SRS (Airbag 5.3)	●	●	●	●	●
XSARA	XSARA (PICASSO) (CHINA)	SRS (Airbag)	●	●	●	●	●
XSARA	XSARA (PICASSO) (CHINA)	SWSM (Switch Module At The Steering Wheel)	●	●	●	●	●
XSARA	XSARA (PICASSO) (CHINA)	TCM (Automatic Gearbox AL4)	●	●	●	●	●
ZX	ZX (16)	ABS (Anti-lock brake System)	●	●	●	●	●
ZX	ZX (16)	ECM (1.4L KFX BOSCH MP5.2)	●	●	●	●	●

ZX	ZX (16)	ECM (1.4L KFX MM1AP)	●	●	●	●	●
ZX	ZX (16)	ECM (1.6L N6A BOSCH ME7.4.4)	●	●	●	●	●
ZX	ZX (16)	ECM (1.6L NFV BOSCH M7.4.4)	●	●	●	●	●
ZX	ZX (16)	ECM (1.6L NFZ BOSCH MP5.2)	●	●	●	●	●
ZX	ZX (16)	ECM (2.0L RFS MM1AP)	●	●	●	●	●
ZX	ZX (16)	TCM (AL4 TA2000 AT)	●	●	●	●	●
ZX	ZX (16)	TCM (AL4 TA96 AT)	●	●	●	●	●
ZX	ZX (2)	ECM (1.4L KFX BOSCH MP5.2)	●	●	●	●	●
ZX	ZX (2)	ECM (1.4L KFX MM1AP)	●	●	●	●	●
ZX	ZX (2)	ECM (1.6L N6A BOSCH ME7.4.4)	●	●	●	●	●
ZX	ZX (2)	ECM (1.6L NFV BOSCH M7.4.4)	●	●	●	●	●
ZX	ZX (2)	ECM (1.6L NFZ BOSCH MP5.2)	●	●	●	●	●
ZX	ZX (2)	ECM (2.0L RFS MM1AP)	●	●	●	●	●